
FEATURES

- Diaphragm cartridge maintains water temperature within ± 2°
- Compensates for water pressure fluctuations preventing scalding
- Flow rate: 6-7 gpm at 80 psi
- Solid brass construction
- Warranty:
 - Limited lifetime warranty (residential use)
 - One year (commercial use)

- Standard finishes:
 - polished chrome
 - o satin nickel
 - o polished nickel
 - o antique bronze
- Listed by IAPMO, CSA, NSF, and other municipalities
- Shipping weight (lbs.): 15
- Shipping dimensions(in.): 22x13x9

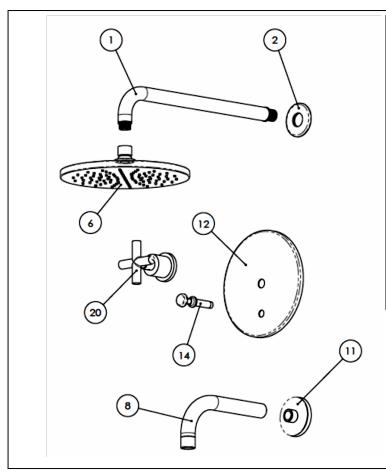

Parts Checklist		
Carefully remove all parts from the box.		
The following parts should be included.		
ID#	Description	Qty
1	Shower arm	1
2	Shower arm flange	1
6	SH-TIT50 Shower head	1
8	Tub spout	1
11	Tub spout base	
12	Face plate	1
	SS-PFP900 (shower only)	
	SS-PFP925 (shower with	
	diverter)	
14	Diverter knob and post	1
	(for SS-PFP925 only)	
20	Handle and escutcheon	1

IMPORTANT INSTALLATION INFORMATION

- USE TEFLON TAPE OR PIPE SEALANT FOR THREADED CONNECTIONS
- DO NOT USE PLUMBER'S PUTTY ON ANY OF THE BRASS COMPONENTS
 This will cause the finish to tarnish and void the warranty. A non-corrosive Alkoxy Silicone is recommended.
- DURING SWEATING OF LINES DO NOT OVERHEAT CASTING Overheating may cause damage to internal mechanism
- COPPER ADAPTORS MAY BE REQUIRED TO COMPLETE YOUR INSTALLATION


- 1. Ensure valve is properly installed according to Installation Sheet provided with valve.

 Note: Specification from finished wall to tip of broached stem is 4".
- 2. Fit faceplate onto valve.

Note: for tub/shower valves with diverter, screw diverter knob and post (16) onto diverter stem.

3. Insert handle trim onto stem broach so that escutcheon (20) rests against faceplate (12) and slight clearance is left for handle (20) to rotate freely.

<u>Note:</u> When fitting handle it may be necessary to shorten broach stem and/or threaded nipple to eliminate gap between handle and escutcheon.

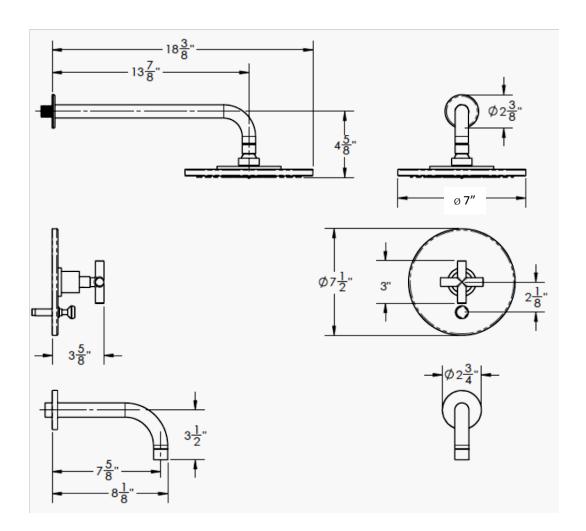

For technical support, please call 1-888-779-5176

Rev. 6/12