

P O T T E R Y B A R N

CADENCE CERAMIC LAMP / SHADE WHITE Assembly Instructions

IMPORTANT SAFETY INSTRUCTIONS:

- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture
- This portable luminaire has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug. Do not attempt to defeat this safety feature.
- This fixture has been rated for up to **one (1) 60-watt maximum TYPE A standard incandescent light bulb** (not included) or **one (1) 13-watt compact fluorescent light bulb** (not included) or **one (1) 9-watt LED light bulb** (included). To avoid the risk of fire, do not exceed the recommended lamp wattage.
- Use with approved **POTTERY BARN** Shades only having a minimum opening diameter of 3-1/2 inches and a minimum lamp-to-shade spacing of 2-1/2 inches.
- This lamp is meant for indoor use.
- **Save these instructions.**

WARNING:

 
- **To reduce the risk of fire, electrical shock or personal injury, always turn off and unplug the light fixture and allow it to cool prior to replacing the light bulb.**
- **Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.**
- **Keep flammable materials away from lit bulb.**

PRE-ASSEMBLY:


- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts Included:


(A) LED BULB (1)
(B) SOCKET RING (1)
(C) LAMPSHADE (1)
(D) SOCKET (1)
(E) LAMPBASE (1)

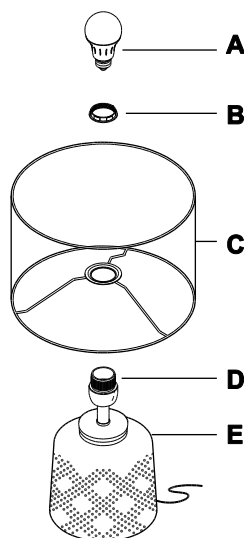


ASSEMBLY INSTRUCTIONS:

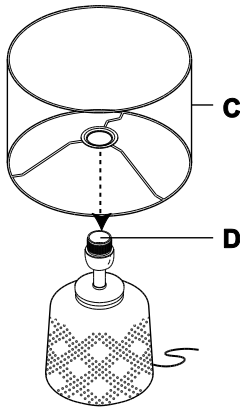 

 
PLACE THE LAMPSHADE (C) INTO
BASE (E) BY PUTTING METAL
WASHER OF SHADE (C) ON THE
SOCKET (D).

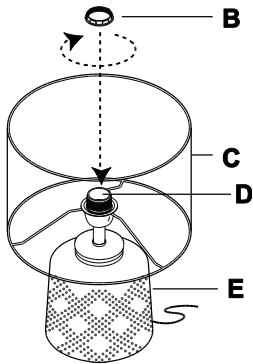

 SECURE THE LAMPSHADE (C) BY
TURNING THE SOCKET RING (B)
ONTO THE SOCKET (D)

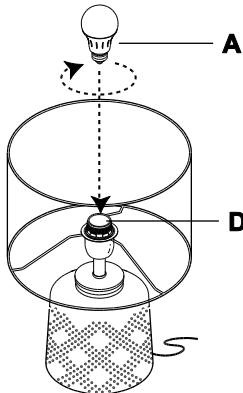

 INSERT LED BULB (A) INTO THE
SOCKET (D)
DO NOT EXCEED THE SPECIFIED
WATTAGE

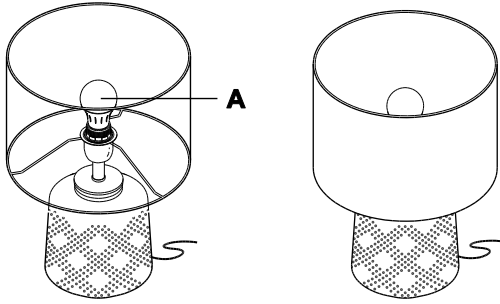

To replace the 9-watt LED light bulb, please follow these steps:

1. Turn off and unplug the light fixture and allow it to cool prior to replacing the light bulb.
2. Unscrew the burned-out light bulb.
3. Insert one (1) **60-watt Type A standard incandescent light bulb** or one (1) **13-watt compact fluorescent light bulb** or one (1) **9-watt LED light bulb**.

CARE INSTRUCTIONS:

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

Thank you for your purchase
Stores | catalog | www.potterybarn.com
USA 1.888.779.5176