

POTTERY BARN

Adair Reading Sconce

Important Safety Instructions:

- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for up to (1) **60-watt TYPE A standard bulb** (not included). To avoid the risk of fire, do not exceed the recommended wattage.

Warning:

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Pre-assembly:


- Remove all parts and hardware from box along with plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts Enclosed:

- Mounting plate (A)
- Back plate (B)
- Adjustable screw (C)
- Upper lamp body (D)
- Socket (E)
- Shade (F)
- Shade ring (G)

Hardware Enclosed:

- (2) Mounting screws (a)
- (4) Plate screws (b)

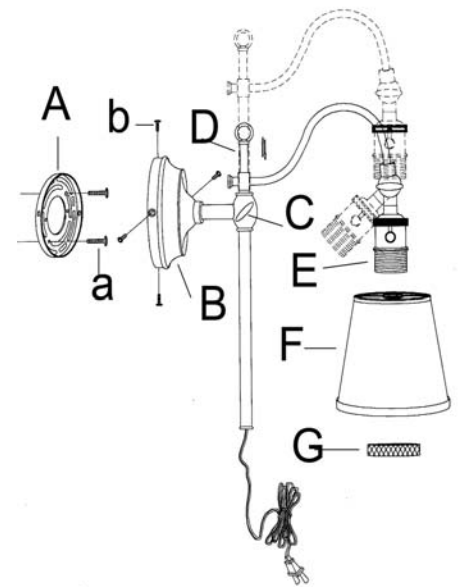

To Assemble:

1. Place the mounting plate (A) against the wall at the desired location. Mark the location of the mounting holes on the wall using a pencil. Secure the mounting plate to the wall with the mounting screws using a screwdriver.
2. Attach the back plate (B) to the mounting plate, making sure to align the pre-drilled holes in the back plate with the pre-drilled holes in the mounting plate. Secure using the enclosed plate screws (b). Tighten with a screwdriver.
3. Unscrew the shade ring (G) from the socket.
4. Place shade (F) into the socket. Secure by turning the shade ring in a clockwise direction.
5. Insert a bulb Max 60 W Type A (not included).
6. Slide upper lamp body (D) to a desired location
7. Turn adjustable screw (C) until tight.
8. Plug fixture into outlet.
9. Assembly is complete.

Care Instructions:

- Clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals and abrasive cleaners as they may damage the finish.

thank you for your purchase

stores | catalog | www.potterybarn.com