

P O T T E R Y B A R N

Danbury Clock

TO INSTALL BATTERY:

Batteries are not included. Open the back of the clock. Insert a new 1.5 volt "AA" battery. Match the battery direction to the polarity markings displayed inside the compartment. Movement should start immediately.

Should clock fail to function properly or the alarm sound becomes "fuzzy", replace with a new battery and assure that it is correctly positioned in the battery compartment. Remove battery if clock is to be stored.

*The TIME SET dial and the ALARM SET dial is the same.

TO SET TIME

The TIME / ALARM SET dial is located inside the back of the clock. Pull and turn this dial counter clockwise until correct time is reached. Do not touch or move hands of clock manually.

TO SET ALARM

Press down and turn the TIME / ALARM SET dial in a counter clockwise direction until desired alarm time is indicated by alarm hand. To activate the alarm, the button at the top must be in the upright position. To turn off the alarm, press the button down.

CARE INSTRUCTIONS:

Clean clock with a soft, dry cloth. Do not use solvents or abrasive cleaners on clock as they may damage the lacquered finish.

To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge standard or alkaline batteries.

Thank you for purchasing the Danbury Clock from Pottery Barn.