


pottery barn kids

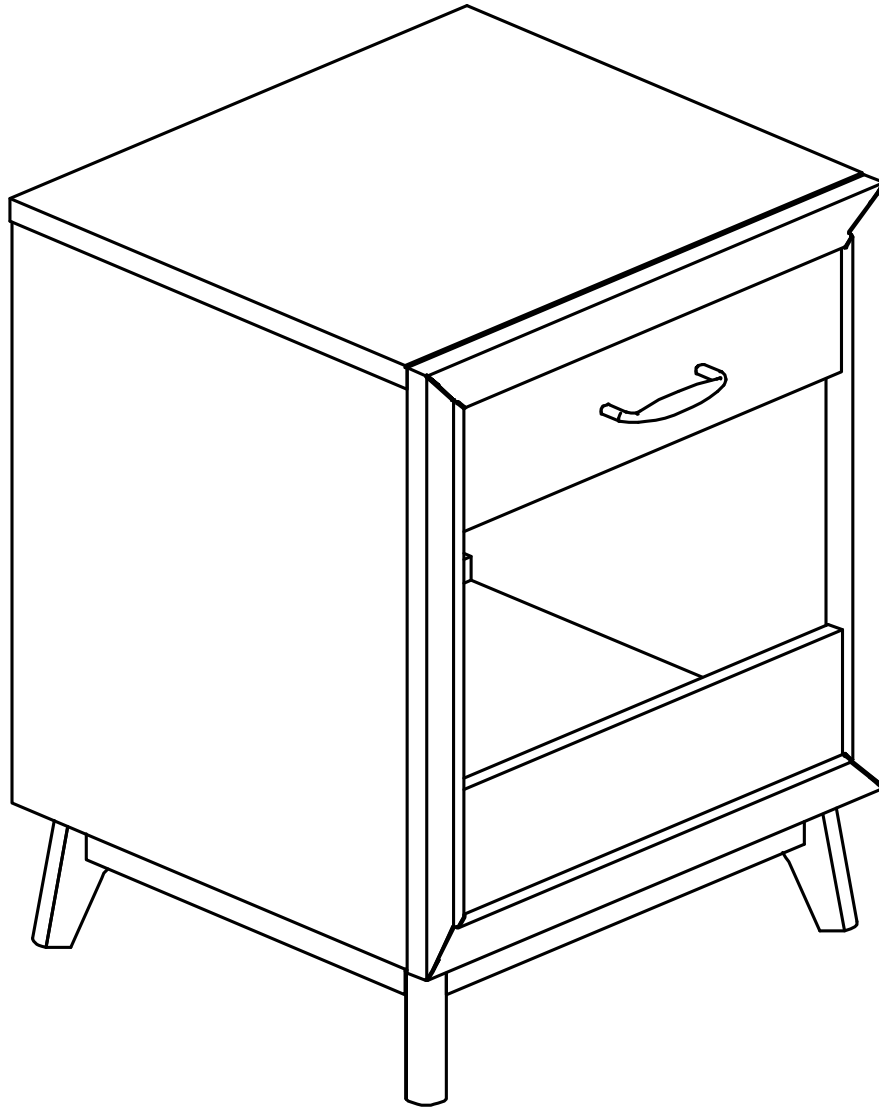

REESE NIGHTSTAND

www.potterybarnkids.com

Important Safety Instructions:


- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:


 


- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.
- Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.

Parts Included:

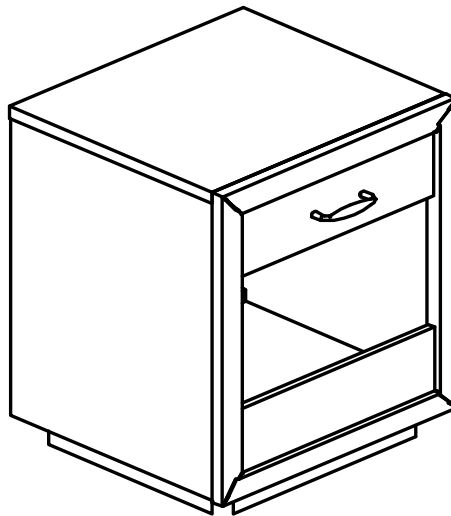- (A) Cabinet (1x)
- (B) Leg (4x)







Hardware Included:

 (C) Allen Key – 1x	 (D) Bolt (5/16"x51mm) – 8x	 (E) Spring Washer (5/16") – 8x
 (F) Flat Washer (5/16") – 8x		


Assembly Instruction Steps:

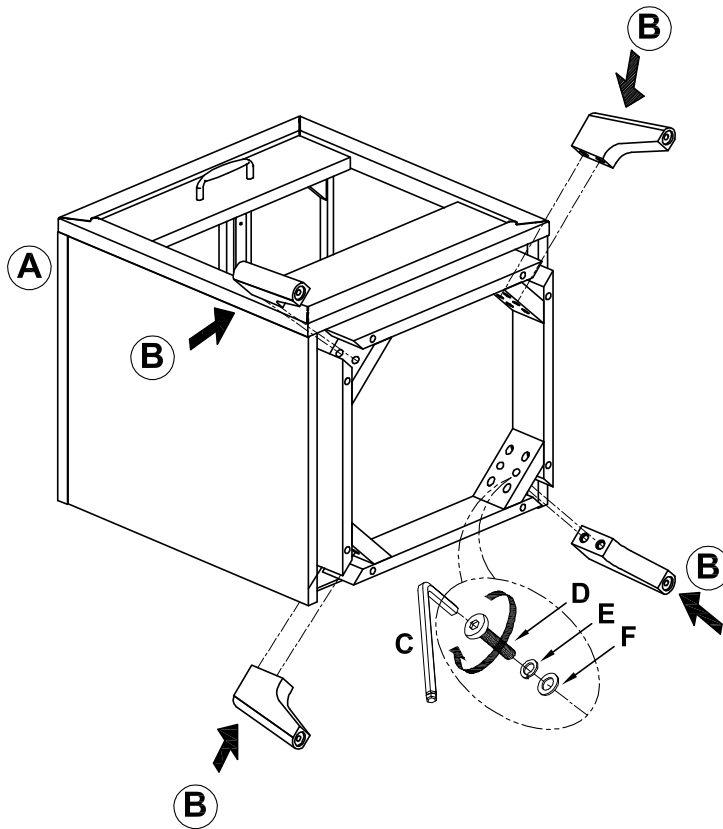1. Attach (B) to (A) as shown below using (D),(E) &(F) with (C).



D		8x
E		8x
F		8x

2. When needed, adjust the levelers located under the legs up and down to keep the Nightstand level.

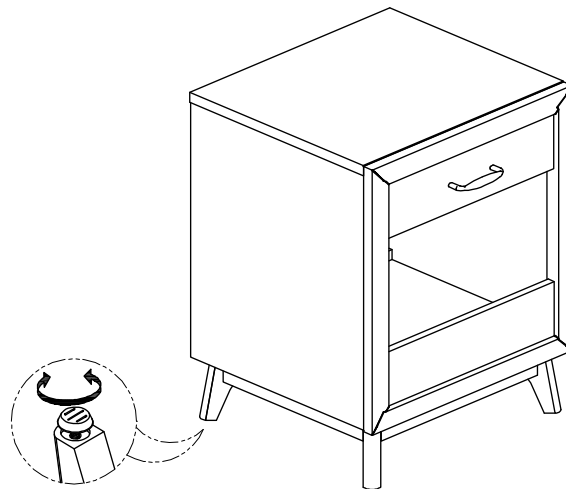

Care Instructions:

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.

Thank you for your purchase
Stores | catalog | www.potterybarnkids.com
USA 1.800.290.8181