

70mm
70mm
70mm
70mm
70mm



**Go Anywhere Mini Speaker**



Please read and understand all safety instruction before use.

**IMPORTANT SAFETY INSTRUCTIONS**

For your safety and the safety of your speaker, always follow the precautions below:

- Disconnect the USB cable if the power cord or plug becomes frayed or damaged.
- Keep your speaker away from any source of heat, such as stove, heater, radiator and other similar appliances.
- Keep your speaker away from any source of liquid, such as area in bathroom, wash basins and vases. Liquid could cause electrical shock or an electrical fire. Protect your speaker from moisture exposure.
- Please follow the installation instructions before using your speaker.
- The speaker should be unplugged from the power source before cleaning. Use a damp cloth to clean the surface of the speaker. Do not use liquid or aerosol cleansers.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

CAUTION: TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

 The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING**

TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. THE UNIT SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON UNIT.

 **ENVIRONMENTAL PROTECTION RECOMMENDATION**

At the end of its working life, this product should not be disposed of with standard household Waste, but rather dropped off at a collection point for the disposal of Waste Electrical and Electronic Equipment (WEEE) for recycling. This confirmed by the symbol found on the product, user manual or packaging.

**For Models That Use Lithium Batteries:**

- Lithium batteries can explode or cause burns if disassembled, shorted, recharged, exposed to water, fire, or high temperatures & not handled appropriately.
- Do not place loose batteries in a pocket, purse, or other container containing metal objects, do not mix with used or other battery types, or store with hazardous or combustible materials.
- Store in cool, dry, ventilated area.
- Follow applicable laws and regulations for transport and disposal.

**LIMITED WARRANTY**

Kinyo Company Inc. (KINYO) warrants this product to the original purchaser against defects in material and workmanship for a period of one (1) year from the date of purchase. Kinyo will, at its option, repair or replace the defective product at no cost to you during the warranty period.

The warranty will not apply if the unit has been subject to accident, misuse, abuse, disassembly, altered or operated contrary to the instructions contained in the accompanying manual.

To obtain warranty service, proof of purchase, in the form of retail receipt, bill of sale or invoice must be presented as evidence that the unit is within the warranty period. The product must be packaged either in its original package or in such a way as to reasonably protect it from shipping damage. Properly fill out the warranty card with description of problem. Send the product freight prepaid or deliver to:

**ATTN: SERVICE DEPT. KINYO COMPANY INC. 14235 LOMITAS AVE., LA PUENTE, CA 91746**

ONE YEAR LIMITED WARRANTY CERTIFICATE

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_ CITY \_\_\_\_\_ STATE \_\_\_\_\_ ZIP \_\_\_\_\_

PHONE \_\_\_\_\_ EMAIL \_\_\_\_\_ MODEL# \_\_\_\_\_

DATE OF PURCHASE \_\_\_\_\_ WHERE PURCHASED \_\_\_\_\_

PROBLEM \_\_\_\_\_

SIGNATURE \_\_\_\_\_

**THIS WARRANTY IS ONLY VALID IN THE UNITED STATES OF AMERICA.**

正面

展開尺寸爲：490\*60  
 成型尺寸爲：70\*60  
 材質：80g銅版紙  
 印刷：單張雙面印刷  
 折頁：風琴折

背面


**BOX CONTENT**



Go Anywhere Mini Speaker    Micro USB to USB charging cable    3.5mm audio cable    User's Guide

**CHARGING THE SPEAKER**


The mini speaker is powered by a rechargeable battery. When the blue power light dims, or if you start to notice sound distortion at higher volumes, it's time to recharge the battery.

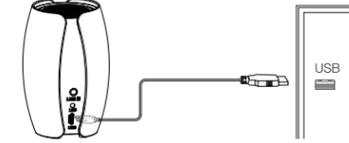

1. To connect the USB cable (included), insert the micro USB connector into the micro USB jack on the speaker and insert the other end into a powered USB port, such as a computer or an outlet.
2. The light on the speaker will turn to red while charging and the light will turn off when it is fully charged. To fully charge will take up to 2 hours.

**Note:** The USB plug is used for charging only not for audio. Please refer to next section for playing the audio.

**PLAYING THE AUDIO**

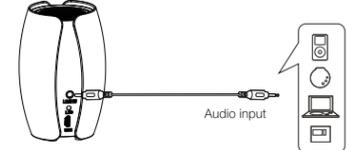

1. Connect the 3.5mm audio cable (included); one end into the Line In jack of the speaker and the other end into the Headphone jack or Line-Out of your audio device.
2. Slide the Power Switch on the speaker to the ON position. The blue LED will turn on.
3. Press play on your audio device and adjust the volume to listen to audio.
4. Adjust the volume on the speaker to desired level.

PROBLEM	POSSIBLE PROBLEM	SOLUTION
No sound from speakers	Power isn't turned on	• Make sure the system is on and the power indicator is lit.
	Low Battery	• Charge the speaker with USB cable by connecting the speaker to a powered USB port; fully charged will take up to 2 hours.
	Volume is set low	• Increase the volume from the speaker system.
	Stereo plug isn't connected the audio source completely	• Increase the volume from the audio source and set it to the medium level.
	Problem with audio source	• Fully connect the stereo plug to the audio source.
	Problem with audio source	• Make sure the stereo plug is connected to the correct input.
	Problem with audio source	• Use an alternate audio source to test the speakers.


PROBLEM	POSSIBLE PROBLEM	SOLUTION
Cracking sound from speakers	Bad connection	• Make sure the stereo plug is connected to the correct input.
	Problem with audio source	• Try another audio source such as portable CD or MP3 player.
Sound is distorted	Volume level on the speaker system is too high	• Decrease the volume.
	Volume level on the audio source (e.g. laptop computer, MP3 player or portable CD player) is set too high	• Check the audio source volume and decrease if necessary.
	Audio source is distorted	• MP3 files usually have poorer quality; noise and distortion are easily noticed with higher volume and/or high-powered speakers. Try an alternate source such as portable CD player.
	Low Battery	• Charge the speaker with USB cable by connecting the speaker to a powered USB port; fully charged will take up to 2 hours.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution to user:** Any changes or modifications to the product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**PRODUCT OVERVIEW**

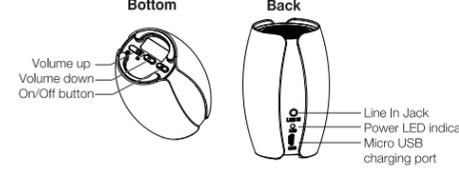

Bottom: Volume up, Volume down, On/Off button

Back: Line In Jack, Power LED indicator, Micro USB charging port