



Paris Lamp Base

IMPORTANT SAFETY INSTRUCTIONS:

This product has a polarized plug (one blade is wider than the others) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

Parts Included:

- (A) Lamp Base
- (B) Saddle
- (C) Harp Caps
- (D) Socket
- (E) Harp
- (F) Harp Top
- (G) Finial

Assembly Instructions:

1. Insert the Harp (E) into the Saddle (B) by squeezing the two Harp Caps (C) together and lowering them onto the Saddle (B), until they cover the two-prongs of the Saddle (B).
2. Unscrew the Finial (G) and place a desired shade (not included) over the assembled Harp (E). Make sure the Harp Top (F) extends through the hole at the top of the shade.
3. Re-attach the finial (G) to the Harp Top (F) and tighten to secure the shade.
4. Insert a maximum (TYPE A) standard 60 WATT light bulb (not included) or 13-Watt compact fluorescent bulb (included for California customers only) into the socket (D).
5. Plug fixture into the proper outlet and test.

CAUTION:

This lamp uses a TYPE A 60W bulb (not included) or 13-Watt compact fluorescent bulb (included for California customers only). To avoid risk of fire, do not exceed the recommended wattage.

Care Instructions:

Wipe clean using a soft, dry cloth or static duster. Always avoid the use of all chemicals and abrasive cleaners as they may damage the lamp's finish.

Thank you for your purchase.
www.pbteen.com

