

# Hinge Adjustment Guide:

This piece of West Elm furniture uses adjustable door hinges.

After you place this piece in its final location you may need to make slight adjustments to ensure proper door alignment.

You may occasionally need to re-adjust the doors as the piece settles over time.



## Note\*\*\*

Before you begin adjusting the hinges, make sure your piece is in its final intended location and that its feet are on a solid surface.

Once in place it is important level your furniture. In most cases leveling your furniture will correct any door misalignment.

If the doors are still misaligned after leveling, you will need adjust the hinges.

Each hinge has a **horizontal adjustment screw**. Turn this screw clock wise to move the door in and counter clock wise to move the door out.

This may take a few attempts. It is best though to make slight adjustments, check and further adjust if necessary.

