

assembly instructions
le fait de monter des instructions
instrucciones de montaje

Important Safety Instructions:

- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it, contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- This instruction is provided for your safety. It is important that they are read carefully and completely before assembling the fixture.
- This fixture has been rated for up to 100 Watt TYPE A standard incandescent light bulb (not included) or 23-watt compact fluorescent bulb (included). To avoid the risk of fire, do not exceed the recommended wattage.
- Save this instruction.

WARNING:

- To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and unplug, allowing it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on.
- Do not look directly at lit bulb. Keep flammable materials away from lit bulb.

Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging. Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts enclosed:

- | | |
|------------------------------|---------------------------|
| (1) Finial (A) | (1) Allen Wrench (I) |
| (1) Harp Top (B) | (2) set screws (J) |
| (1) Harp (C) | (1) Metal Ring (K) |
| (2) Harp Caps (D) | (8) Glass Balls (L) |
| (1) Socket (E) | (1) Crimp Connector B (M) |
| (1) Saddle (F) | (3) Metal Tubes (N) |
| (1) Shade (not included) (G) | (1) Lamp Base (O) |
| (1) Crimp Connector A (H) | |

To Assemble:

1. Screw on one metal tube (N) onto the top of lamp base (O) by turning it in a clockwise direction until tight. Do not overtighten.
2. Screw the second metal tube (N) onto the top of assembled metal tube (N) (from step 1) turning it in a clockwise direction until tight. Screw on the last metal tube (N).
3. Place the 8 pieces of glass balls (L) over the metal tubes (N), ensure all glass balls (L) to go through the metal tubes (N) and the bottom of glass balls (L) with plastic washer is facing downward towards the floor.
4. Place metal ring (K) onto the top of glass ball (L) and screw in the set screws (J) with the allen wrench (I) until tight.
5. Connect the crimp connector A (H) and crimp connector B (M), making sure the plug is completely connected. Insert the assembly plug into the metal tube (N).
6. Turn the saddle (F) in a clockwise direction until tight. Do not overtighten.
7. Slightly squeeze the harp (C) and insert it into the saddle (F), lower the two harp caps (D) until they cover the two-pronged saddle (F).
4. Unscrew the finial (A) from the harp top (B). Place shade (G) (not included) over the assembled harp, making sure the harp top (B) extends through the hole at the top of the shade (G) (not included).
5. Attach the finial (A) and tighten to secure the shade (G) (not included).
6. Insert a bulb-Max 100 watt maximum TYPE A standard incandescent light bulb (not included) or 23-watt compact fluorescent bulb into the socket (E). DO NOT EXCEED SPECIFIED WATTAGE.
7. Plug fixture into the proper electrical outlet and test fixture.

Care instructions:

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

west elm

abacus floor lamp

assembly instructions
le fait de monter des instructions
instrucciones de montaje

west elm

abacus floor lamp

assembly instructions
le fait de monter des instructions
instrucciones de montaje

assembly instructions
le fait de monter des instructions
instrucciones de montaje

