west elm

adjustable metal table lamp

assembly instructions

Important Safety Instructions:

·For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it-contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

- ·This instruction is provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- ·This fixture has been rated for up to (1)) 3-way 150-watt TYPE A standard bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

Warning:

- ·To reduce the risk of fire, electrical shock or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- ·Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- ·Keep flammable materials away from lit bulb.

Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts enclosed:

- (1) Finial (A)
- (1) Harp Top (B)
- (1) Harp (C)
- (2) Harp Caps (D)
- (1) Socket (E)
- (1) Saddle (F)
- (1) Ring Grip (G)
- (1) Lamp Base (H)
- (4) Legs (I)
- (1) Shade (J)

Assembly Instructions:

- 1. Screw the Legs (I) into the Lamp Base (H) as shown.
- 2. Insert the harp (C) into the Saddle (F), and lower the two Harp caps (D) until they cover the two-pronged saddle.
- 3. Unscrew the finial (A) from the harp top (B). Place shade (J) over the assembled harp, making sure the top extends through the hole at the top of the shade.
- 4. Attach the finial and tighten to secure the shade.
- 5. Insert a bulb Max 3-way 150 Watt (Type A) Standard (not included) into the socket (E).

Care instructions:

- ·Clean with soft, dry cloth.
- $\cdot \text{Always}$ avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the lamp.

