

**TURNED**




- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- This fixture has been rated for up to (1)**100 Watt TYPE A standard incandescent light bulb** (not included). To avoid the risk of fire, do not exceed the recommended wattage.
- Use with approved West elm Shades only, having a minimum opening diameter of 4 inches and a minimum lamp-to-shade spacing of 3.5 inches.
- This lamp is meant for indoor use.

### Care Instructions:


- Dust often using a clean, soft, dry and lint-free cloth.
- When blot spills, wipe with a clean, damp cloth immediately.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.

### Parts Included:

- (E) Socket (1)
- (F) Shade Ring (1)
- (G) Lamp Base (1)
- (A) Finial (1)
- (B) Harp Top (1)
- (C) Harp (1) with welded metal ring (D)
- (D) Harp Caps (1)
- (H) Shade (1)

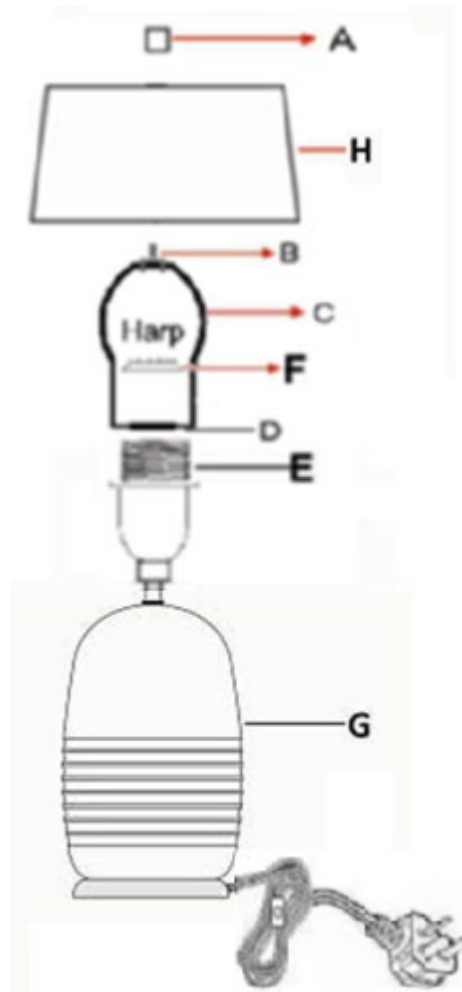


1

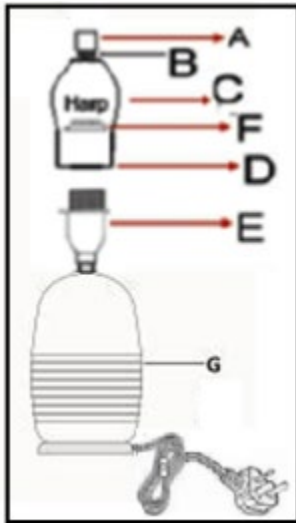


Unscrew shade ring (F) from the lamp holder & place harp metal ring (D) over the holder. Tighten with help of shade ring (F).

2

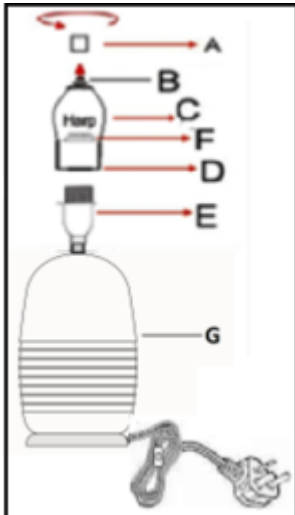

Unscrew the Finial (A) anti clockwise direction from the Harp Top (B).

3

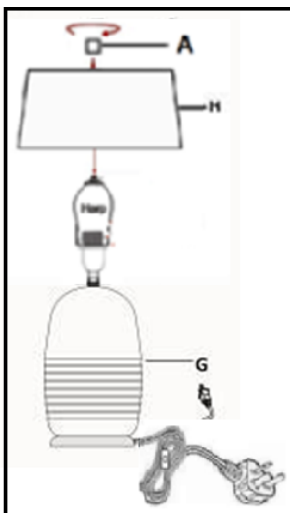

Place SHADE (H) (included) over the assembled harp, making sure the Harp Top (B) extends through the hole at the top of the Shade (H) (included). Attach the Finial (A) and tighten clockwise direction to secure the SHADE (H) (included).

- Insert the specified Light bulb in to the Socket (E). DO NOT EXCEED SPECIFIED WATTAGE.
- Plug fixture into the proper electrical outlet and test fixture.