POTTERYBARN

Danlyn Glass Rod Sconce

Assembly and Installation Instructions

CAUTION:

 BEFORE INSTALLING FIXTURE, MAKE SURE THE POWER TO THE CIRCUIT IS TURNED OFF AT THE MAIN FUSE BOX / CIRCUIT BREAKER UTILITY BOX.

Important Safety Instructions:

- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- We strongly recommend that a professional electrician install all direct wire fixtures.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with Ground wire or equivalent protection system).
- For your safety, it is strongly recommended that two people install the lighting fixture.
- This fixture has been rated for up to one (1) 60-watt maximum TYPE A standard incande scent light bulb (not included) or one (1) 13-watt compact fluore scent light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.
- This lighting fixture is intended for indoor or protected/covered outdoor areas. Do not expose to direct rainfall. SUITABLE FOR EITHER DRY OR DAMP LOCATIONS.
- Save these instructions.

WARNING:


- To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool
 prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.
- This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth
 defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise
 touching this light fixture.


Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- For your safety and convenience, assembly by two people is recommended.

US/CN Page 1 of 6

Tools Required: (not included):

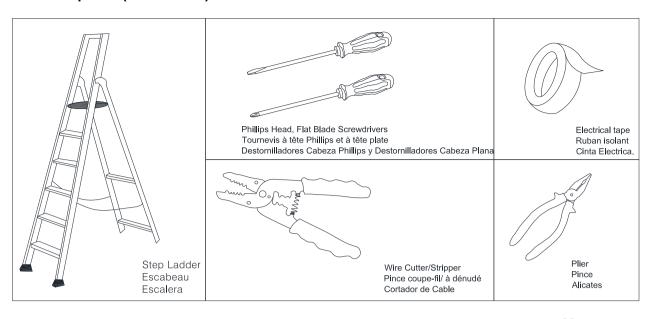

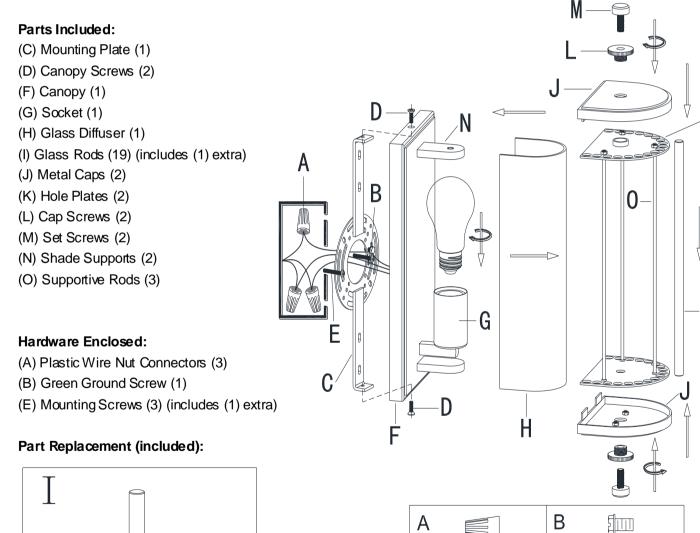

1 x

US/CN Page 2 of 6

3x

3x

D

Ε


K

1x


2x

Assembly Instructions:

- SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
- Carefully unpack all fixture parts and hardware and lay them on a clear workspace.

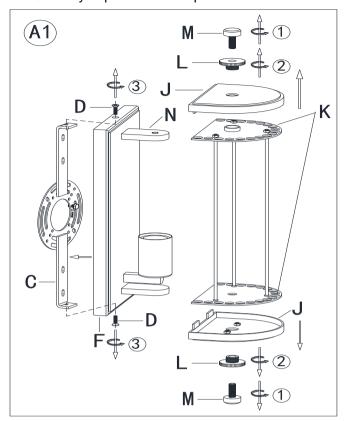


- Separate the whole metal frame section from the Canopy (F) by removing 2 Set Screws (M). Do not discard the Set Screws (M) as these will be used later.
- Separate the Metal Caps (J) by removing the 2 Cap Screws (L). Do not discard the Cap Screws (L) as these will be used later.
- Separate the Mounting Plate (C) from the Canopy (F) by removing the 2 Canopy Screws (D). Do not discard the Canopy Screws (D) as these will be used later.

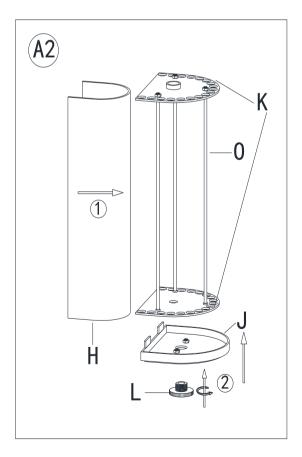


- Gently and carefully insert the Glass Diffuser (H) into the space between the top and bottom Hole Plates (K) as shown.
- 2. Assemble one Metal Cap (J) to the bottom Hole Plate (K) and secure by turning the Cap Screw (L) clockwise until tight.

Caution: The Glass Diffuser (H) hasn't been completely secured in this step! Please be careful of falling off!


US/CN Page 3 of 6

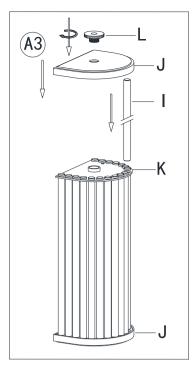


With the help of another person, gently and slowly insert the Glass Rods (I) through the corresponding holes on the upper and lower Hole Plates (K). Then assemble the remaining Metal Cap (J) to the top Hole Plate (K) and secure by turning the remaining Cap Screw (L) clockwise until tight. Now all Glass Rods (I) and Glass Diffuser (H) have been secured.

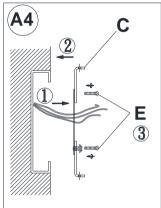

- Insert the J-box wires through the center opening of Mounting Plate (C).
- 2. Attach the Mounting Plate (C) onto the wall J-box.
- 3. Secure the Mounting Plate (C) by turning the 2 Mounting Screws (E) clockwise until tight with a screwdriver

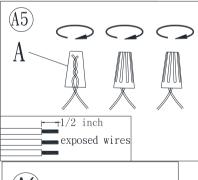


Please read the section" **To Make the Wire Connections**" Below.

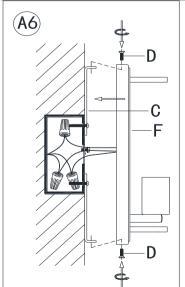


- 1. Position the Canopy (F) over the Mounting Plate (C).
- 2. Secure the Canopy (F) by tightening 2 Canopy Screws (D) with a screwdriver.

US/CN Page 4 of 6

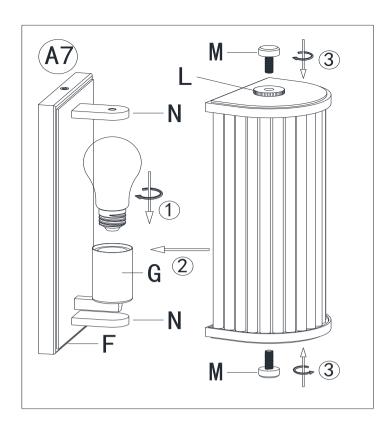

- Insert the specified light bulb into the Socket (G).
 DO NOT EXCEED THE SPECIFIED WATTAGE.
- Place the assembled shade section over the 2 Shade Supports (N) on Canopy (F), aligning the center hole of Cap Screws (L) with the holes from the Shade Supports (N).
- Secure the shade section by turning the Set Screws (M) to the Shade Supports (N) clockwise until tight.

HOW TO REPLACE THE LIGHT BULB:

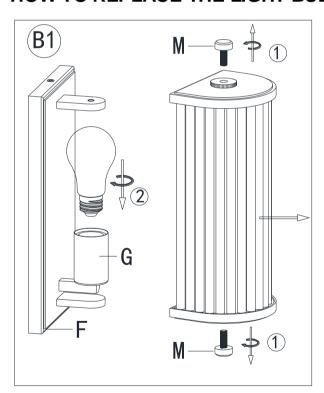


- B2 N 1 N M 2
- With the help of another person to hold the shade section, separate the shade section from Canopy (F) by removing the 2 Set Screws (M)
- Insert the specified light bulb into the Socket (G). DO NOT EXCEED THE SPECIFIED WATTAGE.

With the help of another person, assemble the shade section to the Canopy (F) by turning the 2 Set Screws (M) to the Shade Supports (N) clockwise until tight.

US/CN Page 5 of 6

To Make the Wire Connections:

- Gently pull existing wire down from the junction box and allow wires to hang. The HOT or LIVE wire is usually black.
 The NEUTRAL wire is usually white. Check to see if there is a ground wire that is usually green or green with a
 yellow stripe or exposed copper metal wire. If needed, use a pair of wire strippers to remove about 1/2 inch of
 insulation from each wire.
- 2. Carefully inspect the fixtures wires. The NEUTRAL FIXTURE WIRE is White. The HOT FIXTURE WIRE is Black. The BARE COPPER WIRE is the GROUND WIRE. If you have any doubt and cannot identify the power-supply wires with confidence, then we recommend that you ask an electrician and that you not continue with the installation.
- 3. With the help of another person to hold the weight of the fixture, attach the fixture wires to the junction box wires as shown in the illustrations.

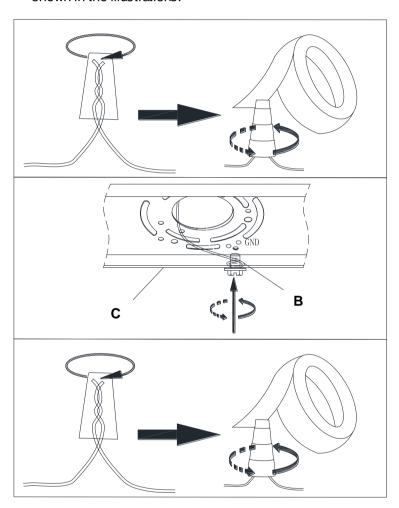

Connect the GROUND FIXTURE WIRE to the GROUND J-BOX WIRE using the Plastic Wire Nut Connector (A) and wrap the connection with electrical tape. Be sure that no wire strands are exposed.

If the junction box DOES NOT have a GROUND WIRE, wrap the fixture's bare ground wire around the Green Ground Screw (B) and insert the screw into the Mounting Plate (C), marked as "GND", and tighten screw to secure the wire.

Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL J-BOX WIRE first and then connect the HOT FIXTURE WIRE to the HOT J-BOXWIRE using the Plastic Wire Nut Connectors (A). Wrap these connections with electrical tape. Be sure that no wire strands are exposed.

NOTE:

IT IS IMPERATIVE THAT THE JUNCTION BOX IN YOUR HOME BE PROPERLY GROUNDED! DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

4. Check the wiring connections and if all looks good, gently tuck the wire connections neatly into the junction box

Care instructions:

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

Thank you for your purchase Stores / Catalog / www.potterybarn.com USA 1.888.779.5176

US/CN Page 6 of 6