
POTTERYBARN

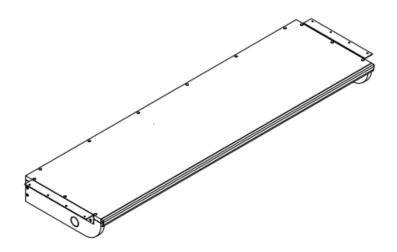

SUTTON DOUBLE WIDE HANGING STORAGE

Date: 06-July-15

Important Safety Instructions:


- Please read all instructions carefully before assembling this item.
- Keep this instruction for future use.
- Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:

- Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- To avoid accidentally discarding small parts or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage the hardware and split the wood.

Parts Included:

- (A) Hanging Storage 1x
- (B) Metal Bracket 2x

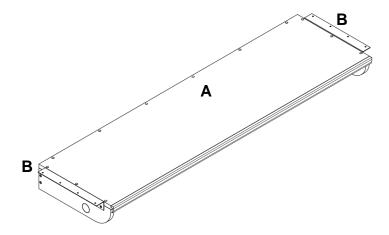

• Hardware Enclosed:

(C) Pan head Wood Screw	(D) Flat head Wood Screw
8x	8x


Tools Required (not included):



Philips Head Screwdriver

Assembly Instruction Step:

- 1. Place Hanging storage (A) on a scratch free surface such as carpet or the foam from inside the shipping box.
- 2. Attach Metal Bracket (B) to Hanging Storage (A), by insert Flat head screw (D) through each of the pre-drilled holes on the Metal Bracket and into the pre-drilled hole on the side of Hanging Storage, as seen in the illustration below.
- 3. Tighten each Screw (D) with a Philips Head Screwdriver.

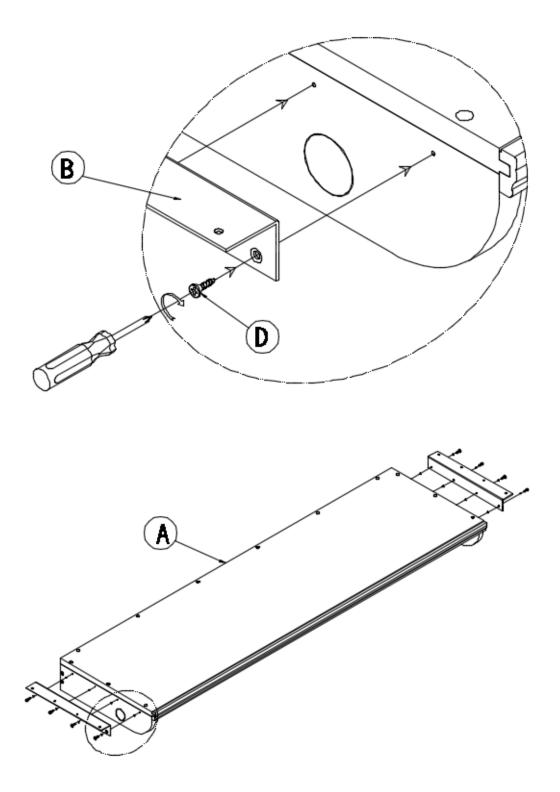


Date: 06-July-15

Rev:

NOTE: the Sutton Hanging Storage is designed to attach the Sutton Tall Hanging Storage (sold separately).

- 4. Place the assembled portion onto the top of Sutton Tall Hanging Storage. Make sure front molding of Hanging Storage (A) flushed with front molding of Sutton Tall Hanging Storage.
- 5. Insert Pan Head Screw (C) through each of the pre-drilled holes on the Metal Bracket, as seen in the illustration below.
- 6. Tighten each Screw (C) with a Philips Head Screwdriver.
- 7. Assembly is completed.

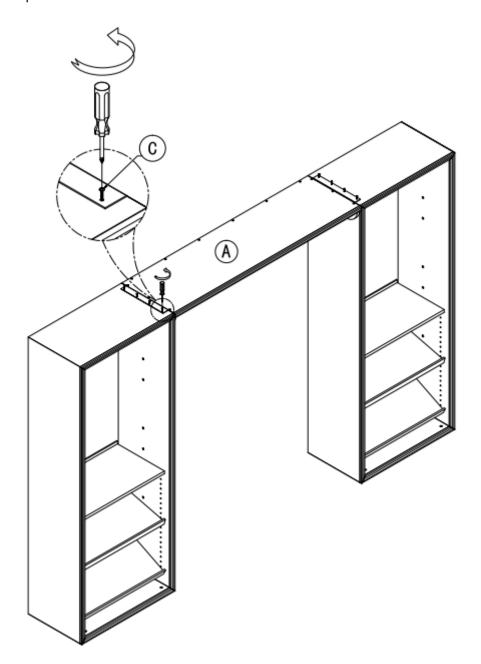

Care Instructions:

- Dust often using a clean, soft, dry, and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight.
 Re-tighten if necessary.