

Roadie Bookcase

Pre-Assembly:


- Please read all instructions before beginning assembly.
- Place all parts on a carpet or foam in shipping box. Find the round sticker with letter (A,B,C,...) on each part and check with below part list to ensure we have all components.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- This cart requires one people to do assembly.

Hardware Enclosed:

A – Castor – 4 Pcs (2 with brake and 2 without)	B – Wood Screw – 16 Pcs


Tools Required:

Phillips Head Screwdriver (not included)



Assembly Instructions:

1. Lay down the Roadie Bookcase onto clean smooth surface such as carpet or cardboard. Attach all Castors (A) onto the available space on the bottom panel, marked with pre-drilled holes. Ensure two same Castors (with or without brake) stay at diagonal corners. Align the 4 holes on metal plate of castor with pilot holes on bottom part of the item. Secured by Wood Screws (B) using a Phillips head screwdriver. See picture below for detail.
2. Turn up the Roadie Bookcase. Assembly is completed

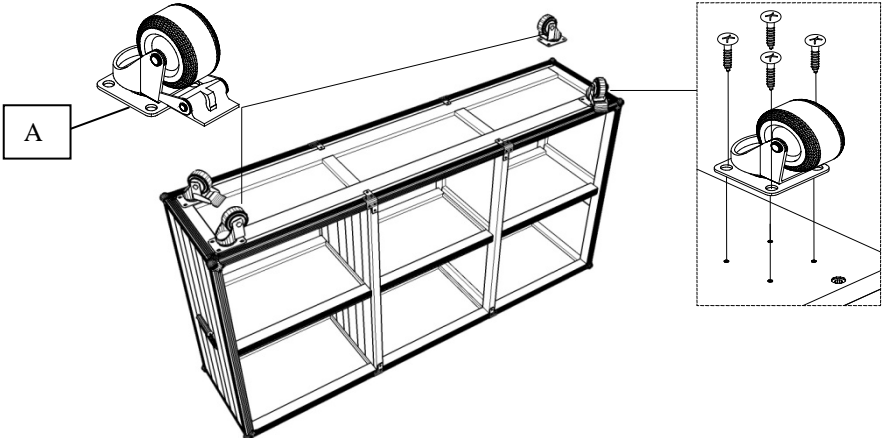

Care Instructions:

- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.
- Dust with soft, dry cloth.
- Do not leave spills unattended
- Avoid abrasive cleaners. If a cleaner is needed, use a mild-cleaner spray and blot with an absorbent cloth
- For indoor use only