

RODEO IRON BED-FULL

Important Safety Instructions:


- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:





- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

Parts Included:

- (A) Headboard 1x
- (B) Footboard 1x
- (C) Side Rail 2x
- (D) Slat 2x
- (E) Middle Slat 1x
- (F) Short Support Leg 2x
- (G) Long Support Leg 2x

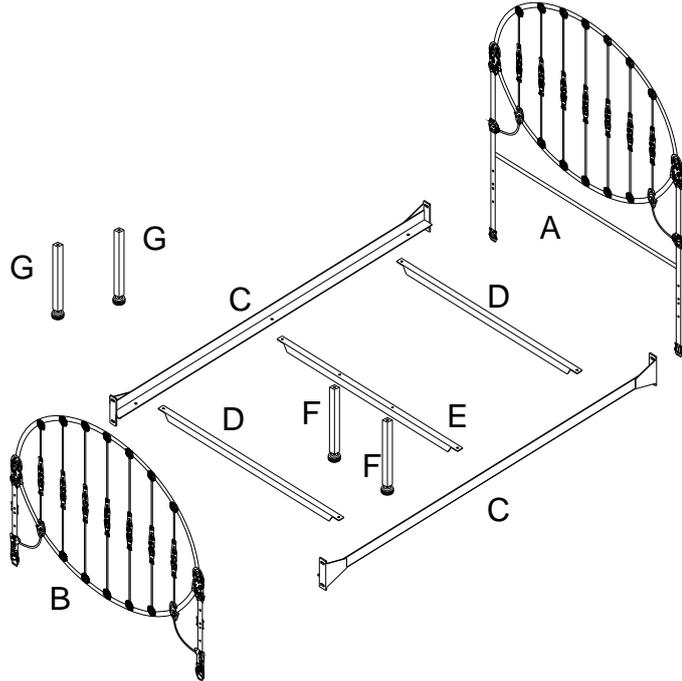


Hardware Included:

<p>(H) Long Bolt</p>  <p>M6 x 25MM 10x</p>	<p>(I) Spring Washer</p>  <p>14x</p>	<p>(J) Flat Washer</p>  <p>22x</p>
<p>(K) Plastic Flat Washer</p>  <p>8x</p>	<p>(L) Nut M6 "</p>  <p>6x</p>	<p>(M) Short bolt</p>  <p>M6x19mm 6x</p>

Tools Required (Included):



Allen wrench 4.0mm



Open wrench

Date: 30-Jun-15
Rev:


www.pbteen.com

Page 2 of 4


Assembly Instruction Steps:

1. Attach Side Rail (C) to Headboard (A) and Footboard (B) using Long Bolt (H), Spring Washer (I), Flat Washer (J) and Plastic Flat Washer (K), tighten by hand at first, securely tighten the bolts with Allen Wrench, but do not over tighten the bolts.

Note: There are two locations to install the side rails. Side rails locate on lower location (See Option 1), side rails locate on upper location (See Option 2).

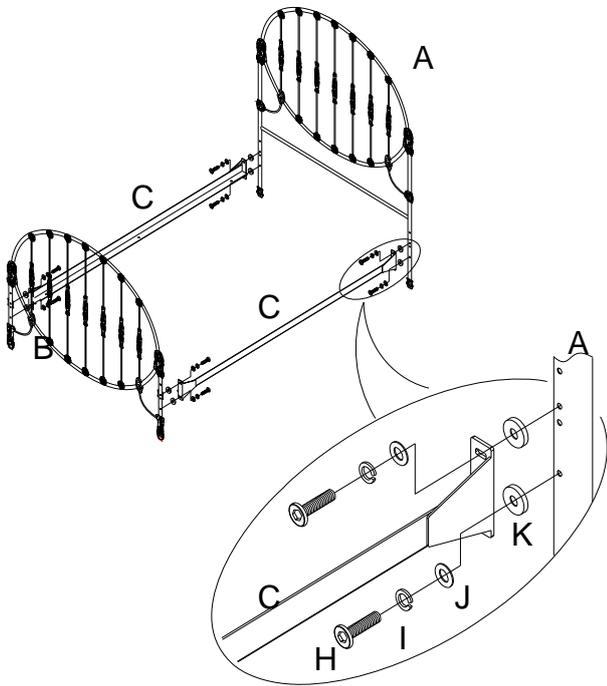


Option 1:

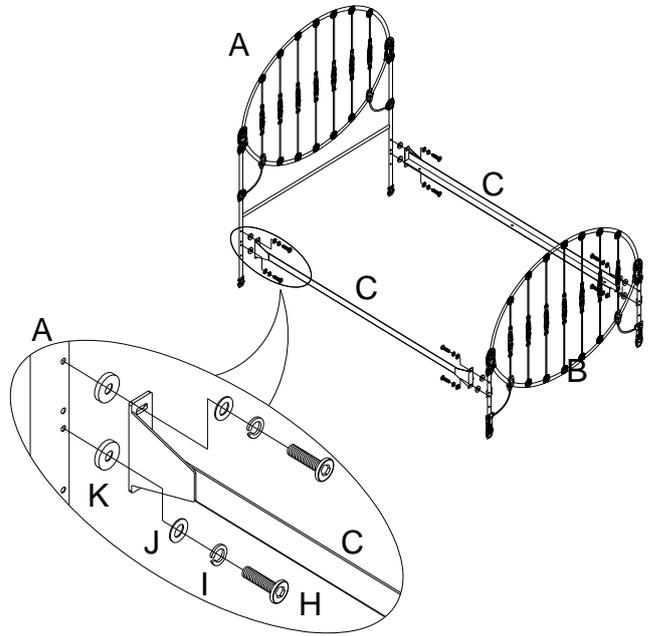


Option 2:

2. Attach the Slat (D) and Middle Slat (E) to Side Rail (C) using Short Bolt (M), Spring Washer (I), Flat Washer (J) and Nut (L), tighten by hand at first, securely tighten all bolts and nuts with Allen Wrench and Open Wrench as shown, but do not over tighten the bolts and nuts.

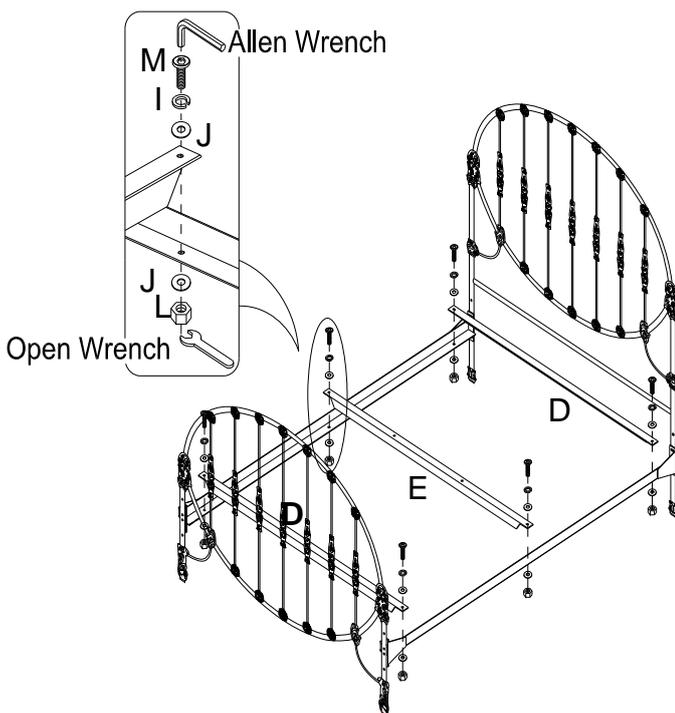

Option 1:


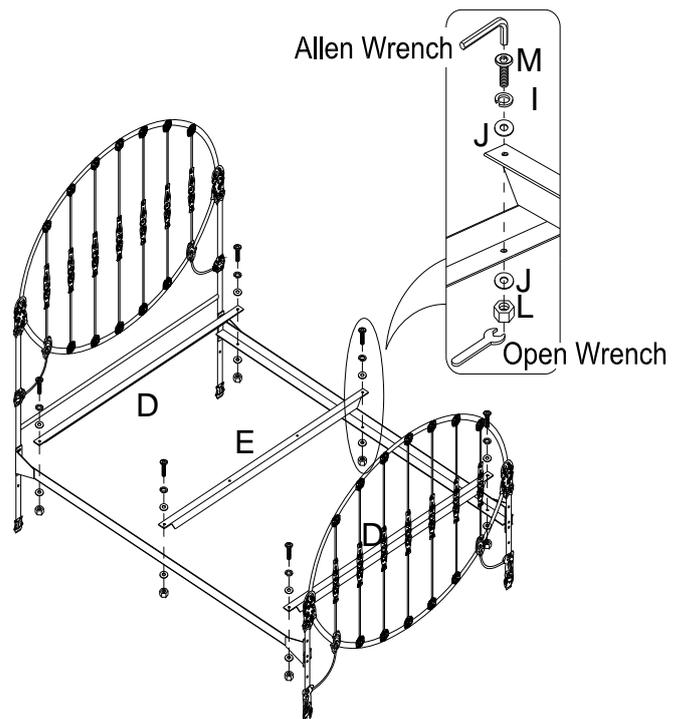


Option 2:



3. Choose Short or Long Support Leg (F or G) according to which option chose in Step 1.

Note: Lower location comes with Short Support Legs (F) (See Option 1). Upper location will come with Long Support Legs (G) (See Option 2).

Attach the Support Legs (F or G) to the Middle Slat (E) using Long Bolt (H) and Flat Washer (J), tighten by hand at first, securely tighten all bolts with Allen Wrench, but do not over tighten the bolts. Adjust the height of each Support Leg (F or G) by turning adjustable levelers on the bottom of support legs clockwise to lower and counterclockwise to raise.

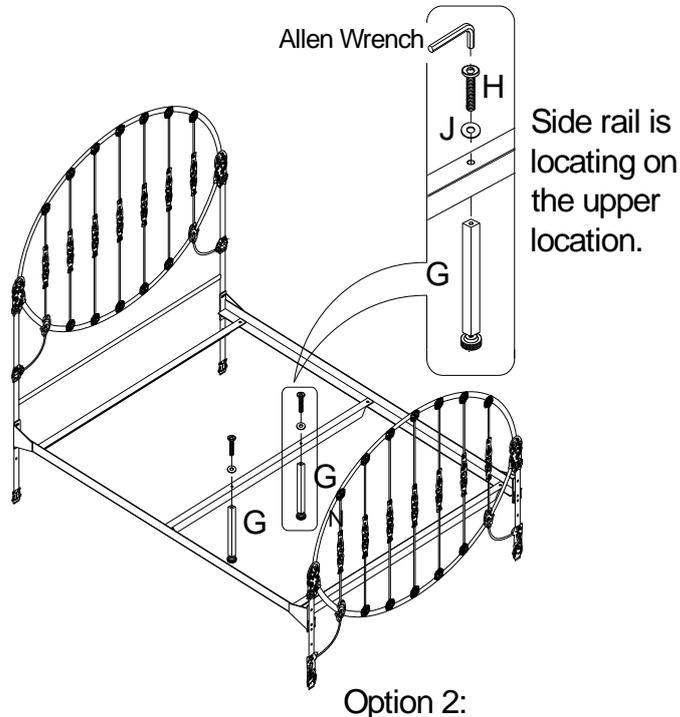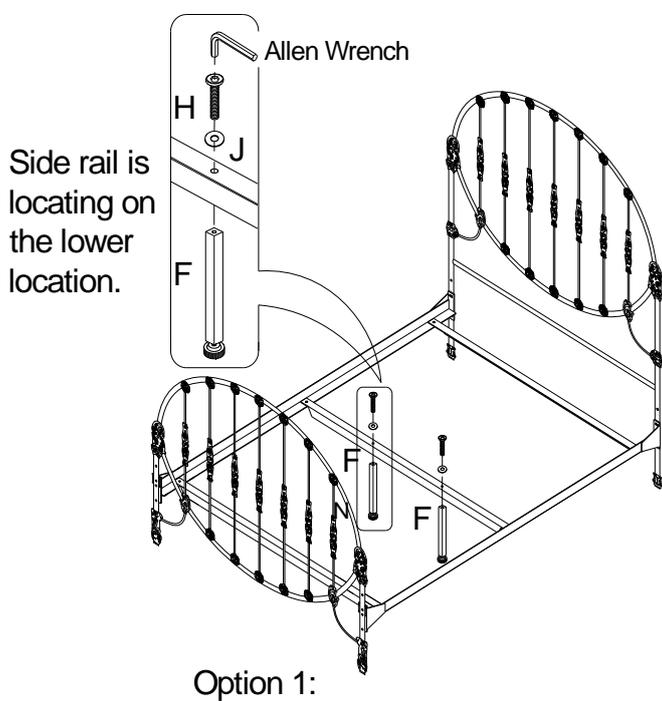

4. The assembly is now complete.

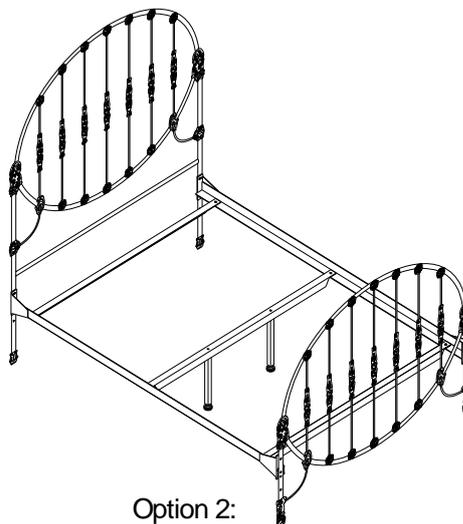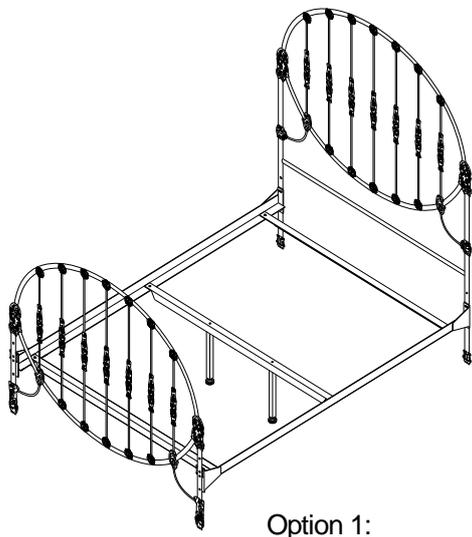

Care Instructions:

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary

Thank you for your purchase
Stores | catalog
www.pbteen.com