

## RODEO IRON BED-QUEEN

**Important Safety Instructions:**


- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

**Pre-assembly:**







- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

**Parts Included:**


- (A) Headboard 1x
- (B) Footboard 1x
- (C) Side Rail 2x
- (D) Slat 2x
- (E) Middle Slat 1x
- (F) Support Leg 4x

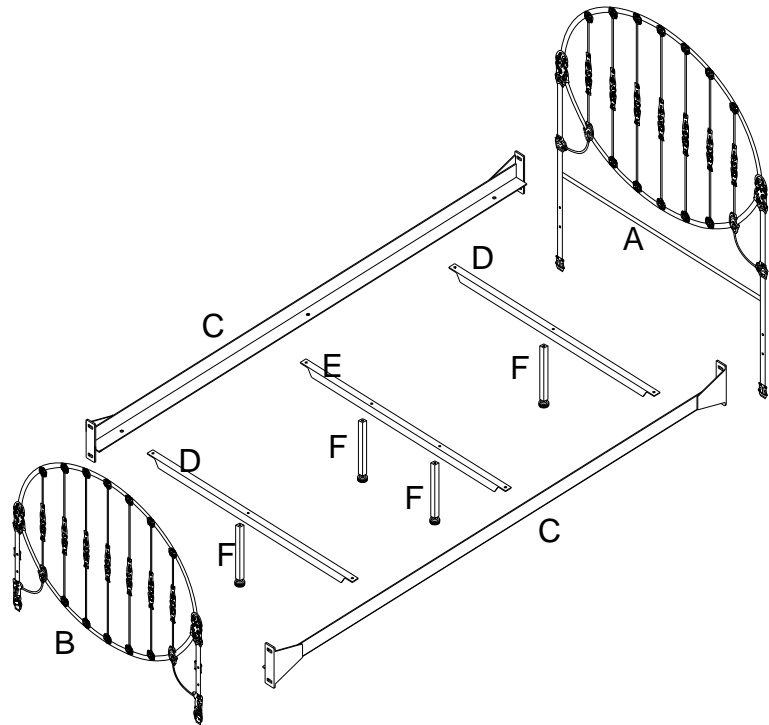


**Hardware Included:**

<p>(G) Long Bolt M6x25MM</p>  <p>12x</p>	<p>(H) Spring Washer</p>  <p>14x</p>	<p>(I) Flat Washer</p>  <p>24x</p>
<p>(J) Plastic Flat Washer</p>  <p>8x</p>	<p>(K) Nut M6</p>  <p>6x</p>	<p>(L) Short bolt M6x19mm</p>  <p>6x</p>

**Tools Required (Included):**




Allen wrench 4.0mm




Open wrench

**Assembly Instruction Steps:**


1. Attach Side Rail (C) to Headboard (A) and Footboard (B) using Long Bolt (G), Spring Washer (H), Flat Washer (I), and Plastic Flat Washer (J), tighten by hand at first, securely tighten all bolts with Allen Wrench, but do not over tighten the bolts.

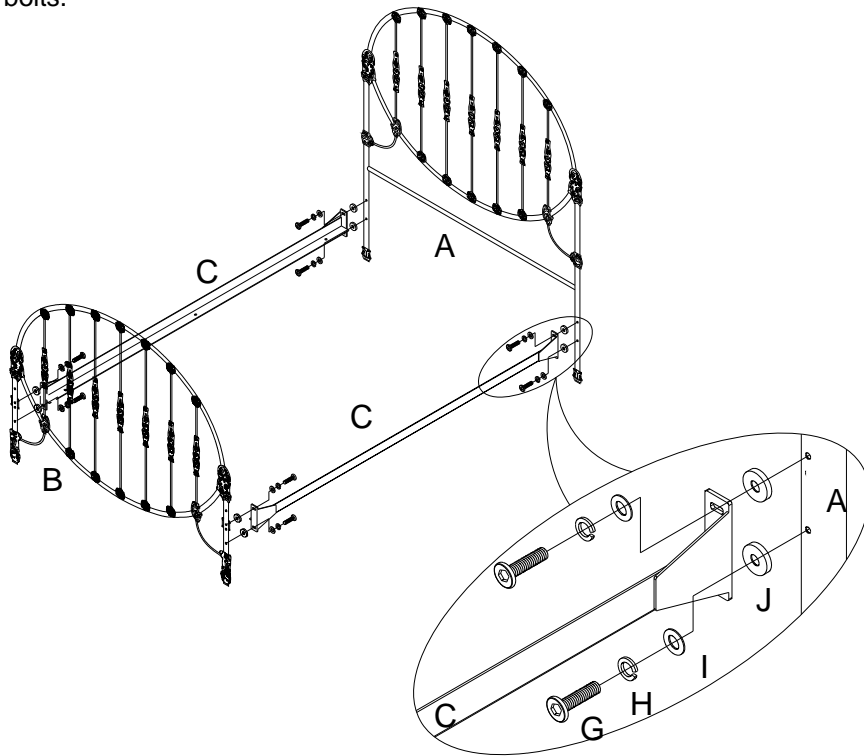


2. Attach Slat (D) and Middle Slat (E) to Side Rail (C) using Short Bolt (L), Spring Washer (H), Flat Washers (I) and Nut (K), tighten by hand at first, securely tighten all bolts and nuts with Allen Wrench and Open Wrench as shown, but do not over tighten the bolts and nuts..

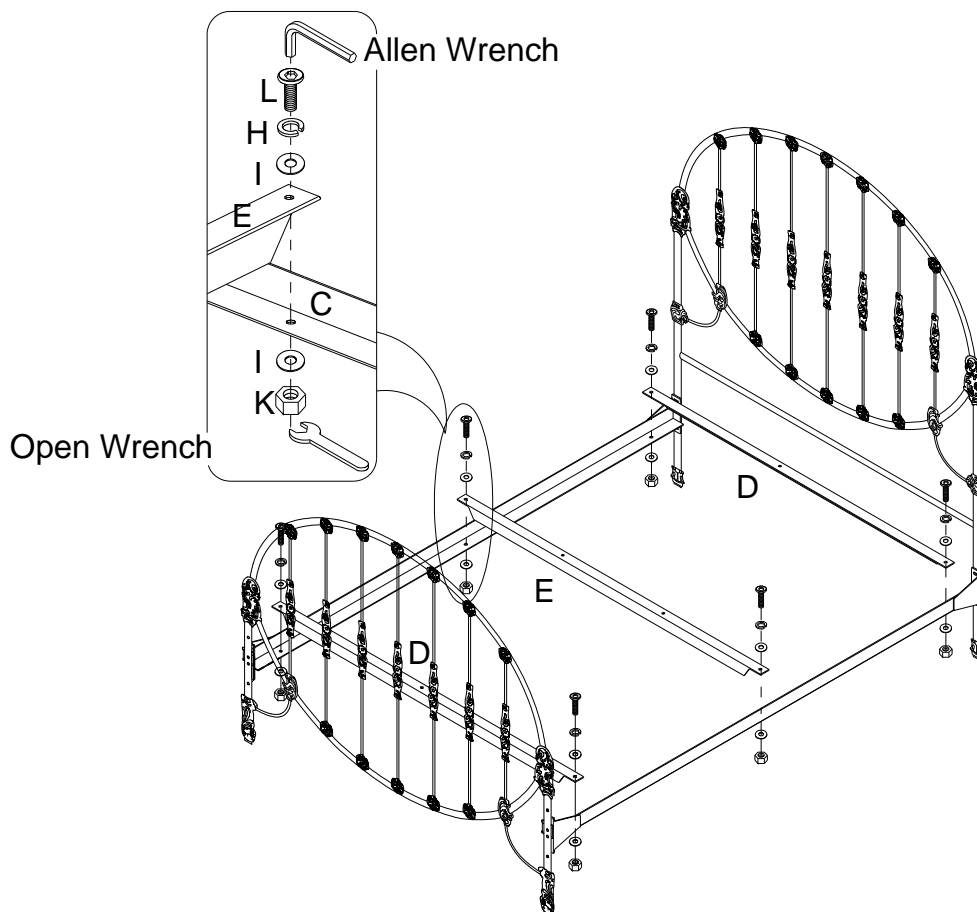

3. Attach Support Legs (F) to Slats (D) and Middle Slat (E) using Long Bolt (G) and Flat Washer (I), tighten by hand at first, securely tighten all bolts with Allen Wrench, but do not over tighten. Adjust the height of each Support Leg (F) by turning adjustable levelers on the bottom of Support Leg (F) clockwise to lower and counterclockwise to raise.

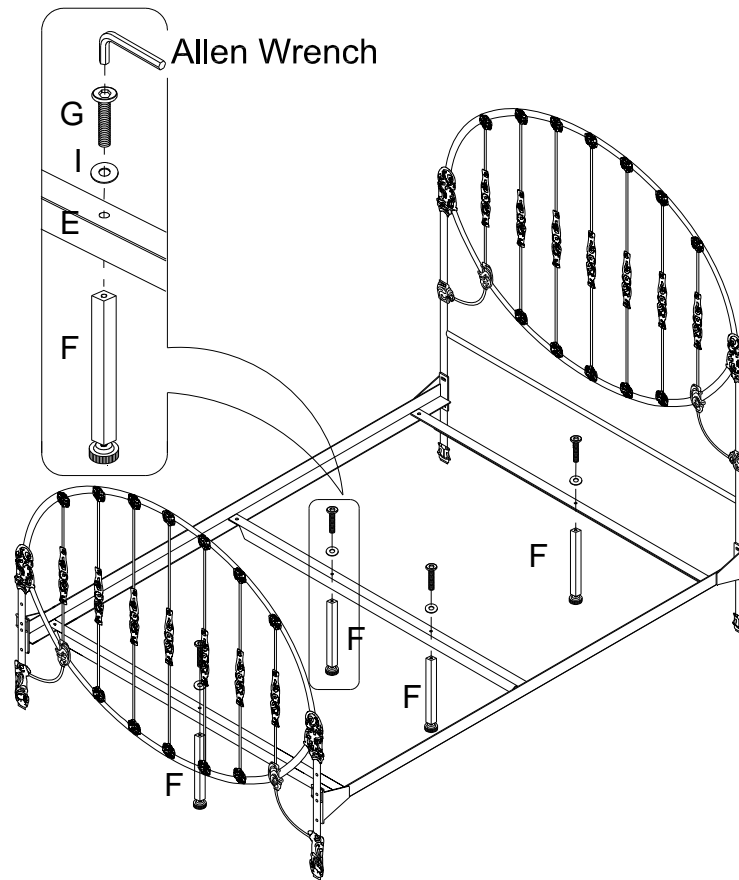

4. The assembly is now complete.

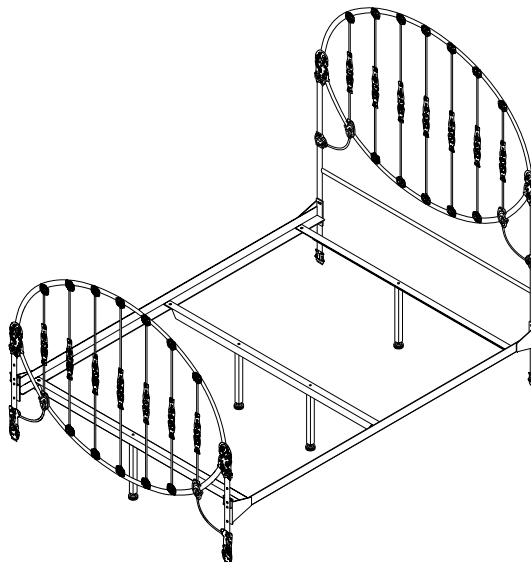

**Care Instructions:**

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight.  
Re-tighten if necessary

Thank you for your purchase  
Stores | catalog