

UNIVERSAL SIMPLE QUEEN BED

Important Safety Instructions:


- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:


- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

PARTS INCLUDED:

- (A) Footboard – 1x
- (B) Side rail – 2x
- (C) Slat – 1 set
- (D) Support Slat – 1x
- (E) Short Support legs – 3x
- (F) Long Support legs – 3x

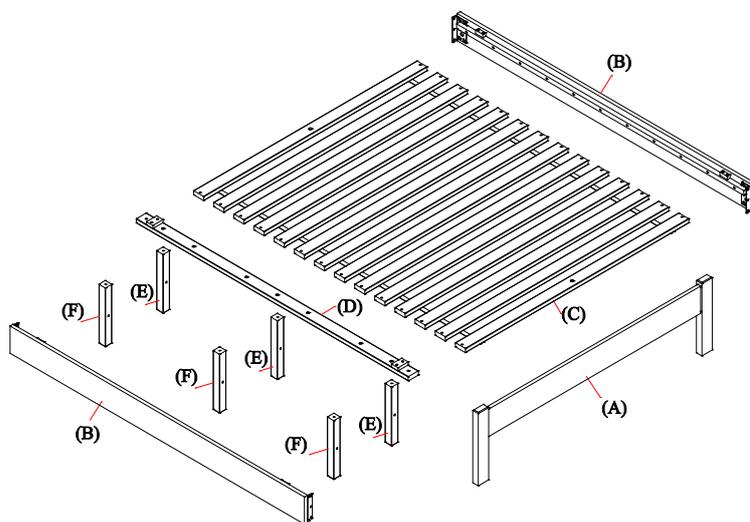

HARDWARE INCLUDED:

(G) Wood Screw -28x 	(H) Flat Washer 1/4"(Φ16)– 12x 	(I) Lock Washer 1/4"(Φ10)– 12x 	(J) Allen Bolt 1/4"*22mm– 12x 	(K) Allen Key – 1x 
(L) Allen Bolt 5/16"*64mm– 3x 	(M) Allen Bolt 5/16"*32mm– 2x 	(N) Lock Washer 5/16"(Φ12)– 5x 	(O) Flat Washer 5/16"(Φ19)– 5x 	

TOOL REQUIRED (not included):

Phillips Head Screwdriver




Assembly Instruction Steps:

This simple base can assembly with different HBs that includes Circulo or Floral Cut Out Headboard


Buy the desired one for your home use.

Note: Use the instruction packed with the headboard to assembly it first.


1. Attach Siderail (B) with Footboard (A) by using Flat Washer (H), Lock Washer (I), and Allen Bolt (J). Tighten with the Allen Key (K).
2. Repeat above step for other side of Siderail (B).

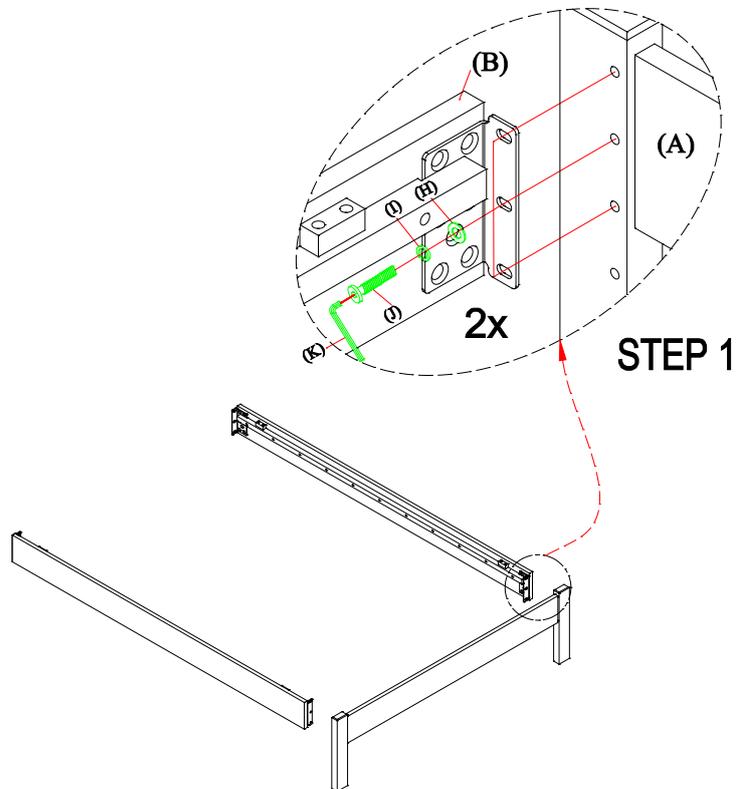

3. Attach Siderail (B) with the desired Headboard (sold separately) by using Flat Washer (H), Lock Washer (I), and Allen Bolt (J). Tighten with the Allen Key (K).
4. Repeat above step for other side of Siderail (B), as seen in the illustration below.

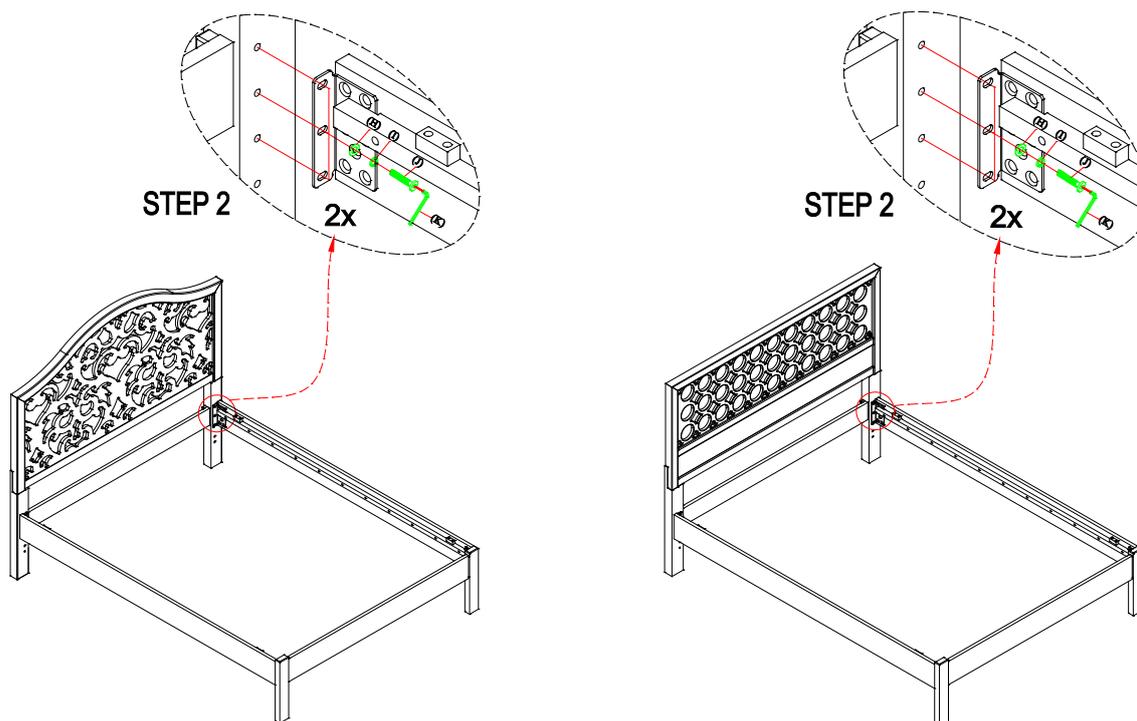


5. Thread the 3 Short Support Legs (E) into the pre-fixed insert nuts of the Support Slat (D), as seen in the illustration below.

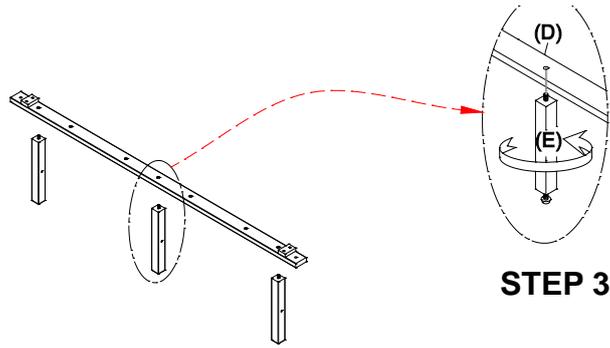


6. To store the Long Support Legs (F) for future use, align and attached the Long Support Legs (F) to inserts located on the Support Rail (D) and insert 3 Long Bolts (L), Lock Washer (N), Flat Washer (O), using Allen Key (K).


NOTE: When using a trundle, store the Short Support Legs (E) here for future use.

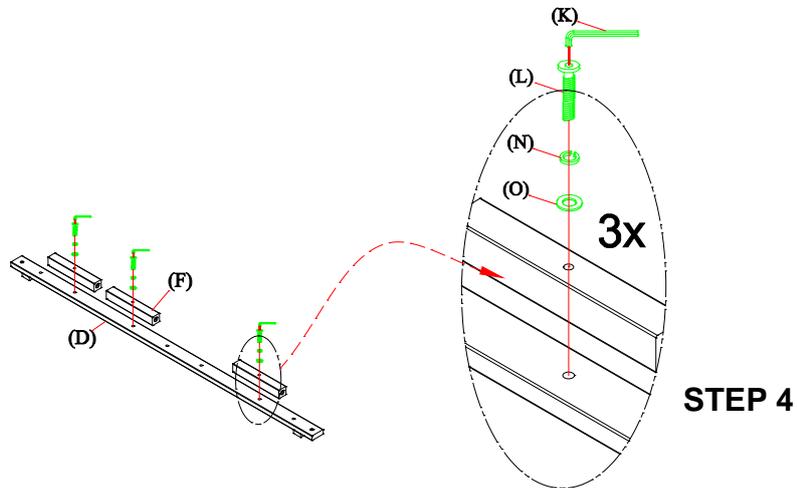

7. Attach Slat (C) to Support Slat (D) by using Flat Washer (O), Lock Washer (N), and Allen Bolt (M). Tighten with the Allen Key (K), as seen in the illustration below.

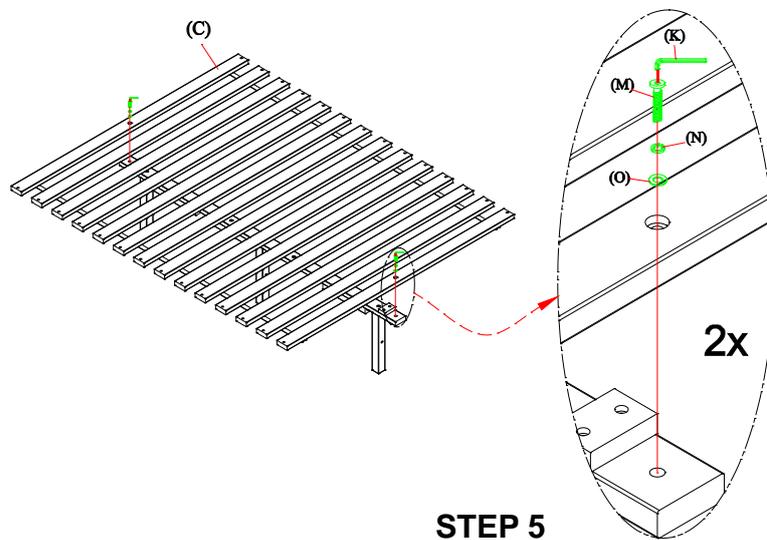

8. Roll out the Slat (C) and secure with 28 Wood Screws (G) using a Philips Head Screwdriver.

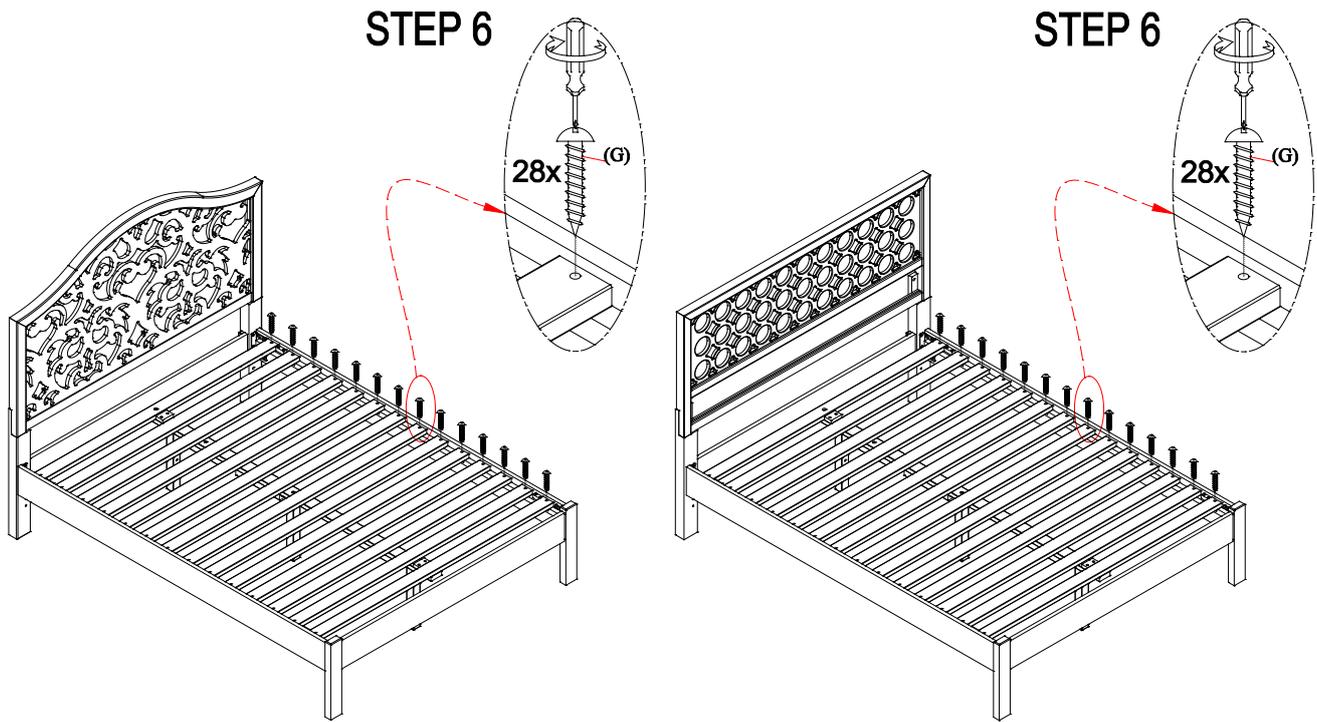

9. Assembly is completed.

Care Instructions:

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight.
Re-tighten if necessary.

Thank you for your purchase
Stores | catalog