




**BEADBOARD DAYBED  
(FULL / TWIN)**

**ASSEMBLY INSTRUCTIONS**

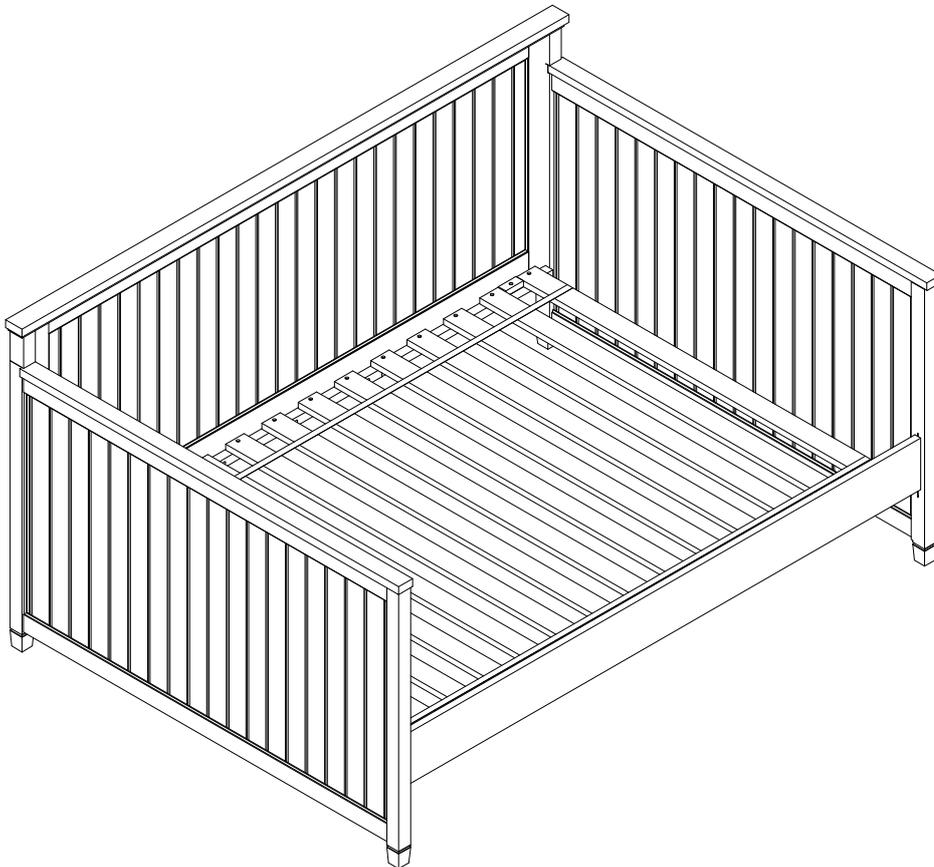

### Important Safety Instructions:


- Please read all instructions carefully before assembling this bed.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep these instructions for future use.
- Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.

### Pre-assembly:


- Remove all parts and hardware from the box. Place them on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- To avoid accidentally discarding small parts or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage the hardware and split the wood.

### Parts Included:

- (A) Back Panel (1x)
- (B) Left Side Headboard (1x)
- (C) Right Side headboard (1x)
- (D) Side Rail (1x)
- (E) Slat Roll (1x)

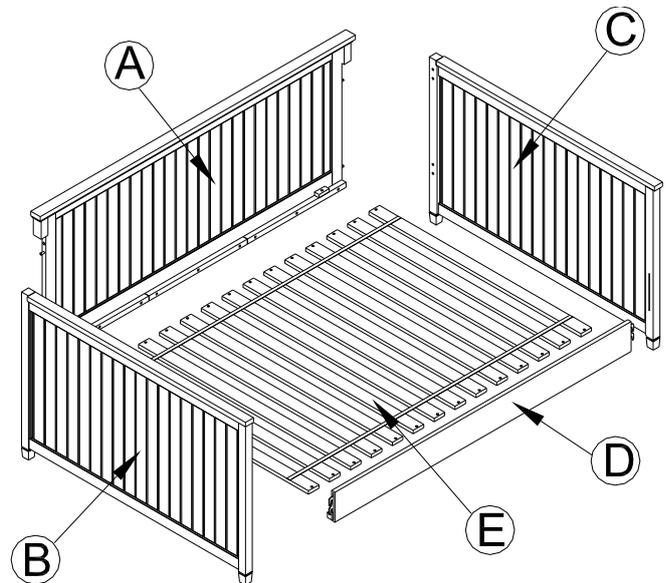


### Hardware Included:

 (F) Allen Key – 1x	 (G) Bolt 1/4"x 45mm – 4x	 (H) Half Moon Washer – 4x
 (I) Spring Washer 1/4" – 4x	 (J) Flat Washer 1/4" – 4x	 (K) Wood Screw 4x30mm – 28x


### Tools Required (not included):

Philips Head Screw Driver




### Assembly Instruction Steps:

1. Attach the Left & Right Headboards (B&C) to the Back Panel (A).
2. Secure with 4 sets of: Bolts (G), Spring Washer (I), Flat Washer (J), and Half-Moon Washer (H) from the cut-outs on the Back Panel (A) and into the metal inserts located on the Left & Right Headboards (B&C).
3. Loosely tighten the bolts with Allen Key (F).
4. Hook the Side Rail (D) to both of the Headboards (B&C) with the solid ledge facing inside, as seen in the illustration below.
5. Tighten all bolts after the side rail is in place.

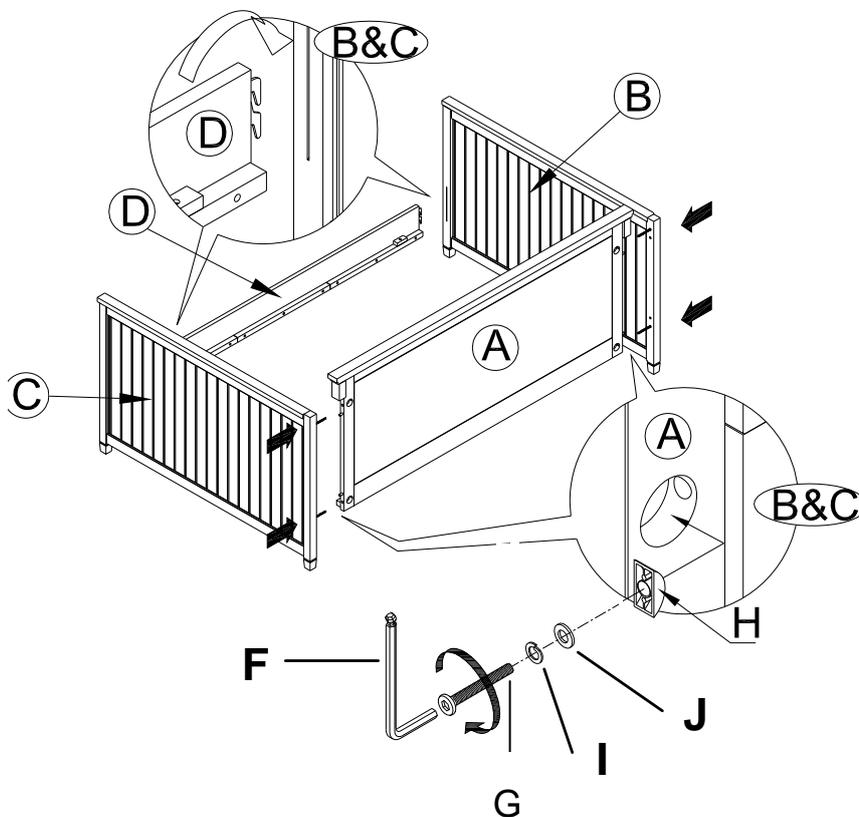

G		4x
I		4x
J		4x
H		4x

6. Place Slat Roll (E) into the bed frame.
7. Secure with 28 Wood Screws (K) by using a Phillips Head Screwdriver (not included).

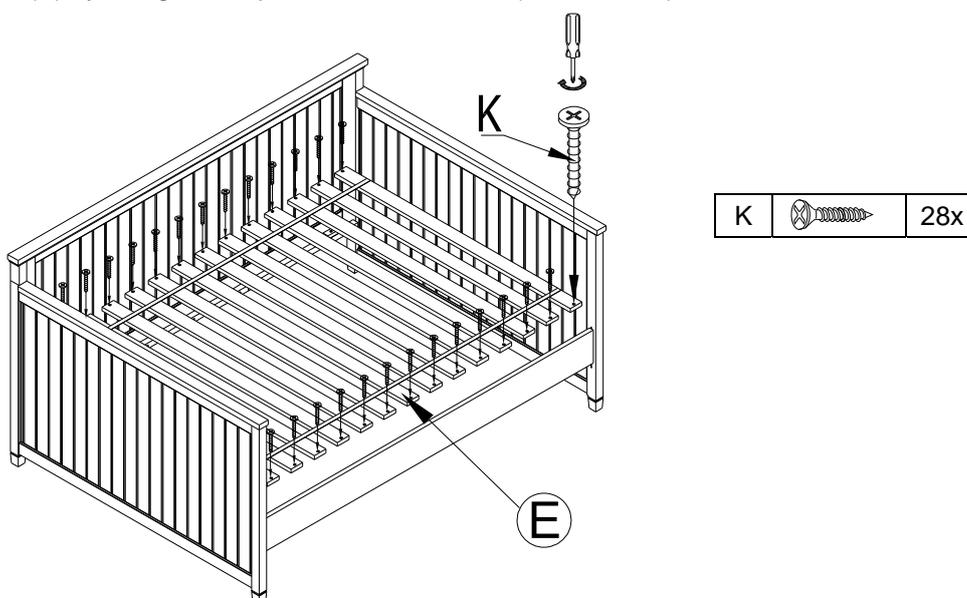

K		28x
---	---	-----

### Care Instructions:

- Dust often using a clean, soft, dry, and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives, or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.