





Flower Back Lite Vanity Mirror

Important Safety Instructions:

- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock. It should not be played with or placed where small children can reach it.
- **LED BULBS ARE NON-REPLACEABLE**
- Unplug the transformer from the power outlet when the product is not in use.
- Only use with supplied transformer.
- This product is meant for indoor use.
- **Save these instructions.**
-

Parts Included:

- (A) Paper Template—(1)
- (B) Drywall Anchors – (2)
- (C) Wall screws – (2)
- (D) Keyhole—(2)
- (J) Flower Back lite Vanity Mirror (1)
- (E) Flower Nuts—(34)- (2) spare included
- (F) Flower —(40)- (8) spare included
- (G) Threaded Branch—(32)
- (H) Transformer—(1)

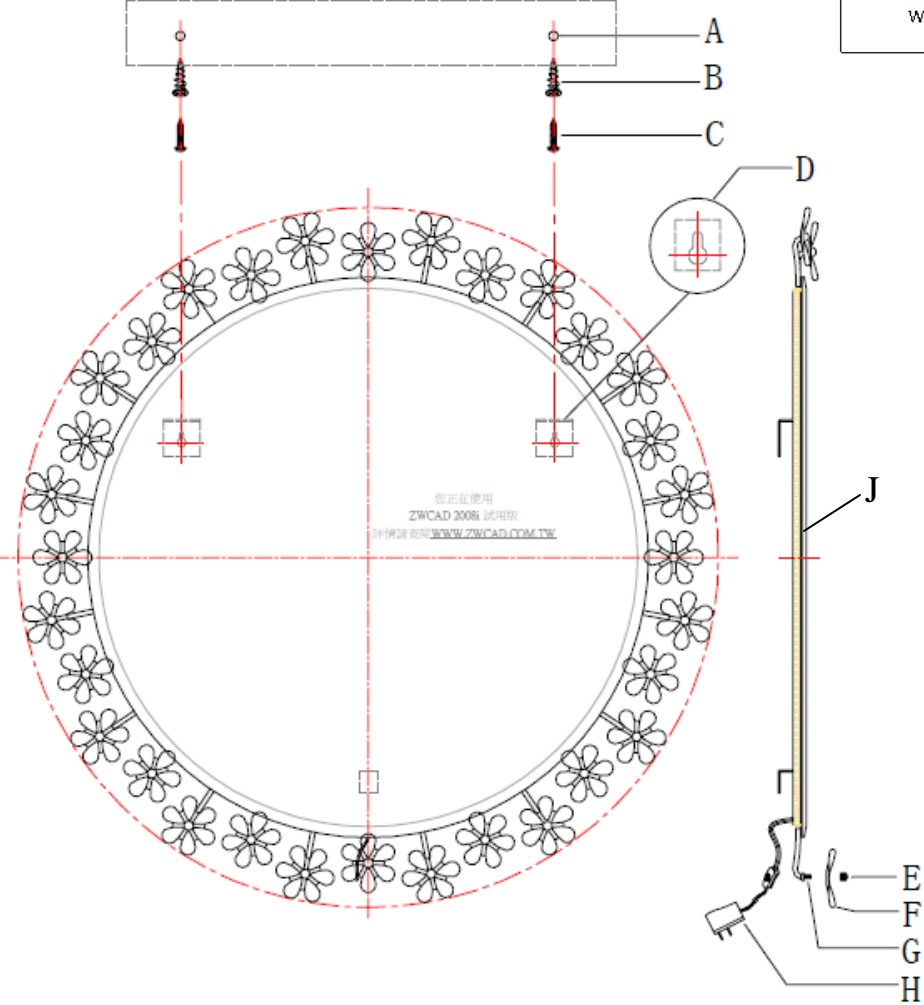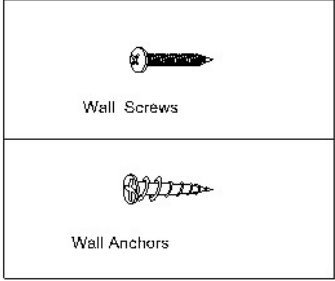

TOOLS Required (not included): Level, Tape Measure, Stud Finder, #2 Phillips Screwdriver, Pencil, and Drill & Drill Bit.

Mounting Instructions:

- 1) **This mounting hardware is meant for dry wall/stud mounting only.** If walls are concrete, brick or plaster, please consult your local hardware store for assistance. For safety and ease of mounting, installation is recommended using two people. For stud mounting the Drywall Anchors (B) are not required, use only the Wall Screws (C).
- This wall-mounted item includes two Keyhole (D) located on the back side of the Flower Back lite Vanity Mirror (J). Before starting, hold the fixture against the wall to determine the hanging location – **MAKE SURE THAT A POWER OUTLET IS REACHABLE BY THE CORD** without straining the cord.
- Stud mounting is always best, so try to position the Keyhole (D) over the wall studs if possible. Use a stud finder to locate a stud in desired wall location. If the Keyhole (D) aligns with the wall stud, use provided Wall Screws (C). If there is no stud, the Drywall Anchors (B) Wall Screws (C) are both required.
- Determine your desired hanging location. Place the provided Paper Template (A) against the wall at the desired location. Mark the location of the two Keyhole (D) of the provided Paper Template (A) onto the wall using a pencil. Use a carpenter's level to ensure a level installation.

Stud Mounting:

1. Pre-drill small pilot holes at the marked wall screw locations. This will make installing the Wall Screws (C) easier.
2. Use a Phillips screwdriver to rotate each of the Wall Screws (C) clockwise until the screw head is about 3/8" from the wall. This protruding portion of the screw will engage with each of the mounting Keyhole (D) located on the back of the Flower Back lite Vanity Mirror (J)..

Drywall Mounting:

1. Use a Phillips Screwdriver to insert the Drywall Anchors (B) at the marked Keyhole (D) locations. Do not "push" or drive the Drywall Anchors (B) into the wall, it is designed to bore into the wall like a drill bit. Slowly turn the Drywall Anchors (B) clockwise while applying pressure until the flange just touches the wall.
 2. Use the Phillips screwdriver to secure a Wall Screw (C) into each installed Drywall Anchor (B). Rotate the Wall Screw (C) clockwise until the screw head is about 3/8 inches from the wall. This protruding portion of the screw will engage with each of the mounting Keyhole (D) located on the back of the Flower Back lite Vanity Mirror (J).
- 5) Preferably with the help of another person, lift the lighting fixture against the wall so that the two mounting Keyhole (D) located on the back of the Flower Back lite Vanity Mirror (J) align with and engage the protruding screw heads. Gently lower the lighting fixture so that the screws support its full weight. Make sure that each screw head is completely engaged with each Keyhole (D) before releasing the fixture. Some readjustment of the screws may be needed to ensure a secure fit against the wall.
 - 6) Secure the Flower (F) onto the Threaded branch (G) with Flower Nut (E) piece by piece carefully.
 - 7) Plug the Transformer (H) into the proper electrical outlet, turn on the switch and test the Flower Back lite Vanity Mirror (J).

Care instructions:

- Wipe clean with soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

FCC COMPLIANCE:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try

to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC COMPLIANCE:

This Class B digital apparatus complies with Canadian ICES-003.

Thank you for your purchase.
www.pbteen.com