



WOOD/WIRE WALL ORGANIZER METAL BASKET

Mounting Instructions:

Hardware (included): TWO Anchors and TWO Screws

Tools Required:

- a) Screwdriver
- b) Pencil
- c) Tape Measure
- d) Level
- e) Stud-Finder

The hardware included with this item is meant for Drywall mount only. If your wall is made from another material such as concrete or plaster, please consult your local hardware store for assistance in selecting the correct hardware. Since this item is relatively long and quiet heavy, we recommend that two people work together to mount this item to the wall.

Prior to Mounting: Position the wall organizer bracket so that you have access to the back. Use a tape measure to make the following two measurements:


- A) The distance between the top of either keyhole and the top edge of the panel; and
- B) The distance between the two keyholes (measure from the center of each).

Mounting Instructions:


- 1) With the help of one or two other people, hold the wall organizer bracket at a desired location on a wall. Position a level on the top of the wall organizer frame to help ensure it is level. Using a pencil mark the wall (lightly) along the entire length of the top of the wall organizer frame. This line is the "Upper Line". Set the item aside.
- 2) Using the tape measure and measurement (A), make a "Lower Line" below the top line.
- 3) Using the tape measure and measurement (B), make two marks centered along this lower line. The marks should be spaced apart exactly the distance of measurement (B). These are the insertion marks for the hardware.
- 4) If either mark aligns with a wall stud (use a stud finder to determine this), do not use the provided anchors because they cannot penetrate wood. For these stud-aligned marks, secure just a provided screw using the screwdriver. Rotate the screw clockwise until the screw head resides about 3/8 inch from the wall.
- 5) For marks that do not align with a stud, use the screwdriver to install an anchor into the wall at these marks. Place the tip of the anchor at the mark and use the screwdriver to both rotate the anchor (clockwise) and gently push it into the wall. The anchor will drive itself into the wall like a screw. Continue rotating the anchor until its wide flange is even with the wall surface. Do not over-tighten. Repeat this step with the other anchor and insertion mark.
- 6) Use the screwdriver to secure a screw into each installed anchor. Rotate the screw clockwise until the head of the screw resides about 3/8 inch from the wall.
- 7) With the help of another person, carefully lift the wall organizer bracket against the wall so that the protruding screws can be positioned within each of the two keyholes. Lower the wall organizer until the screws support its weight.

Line Drawing of the Item:

FRONT

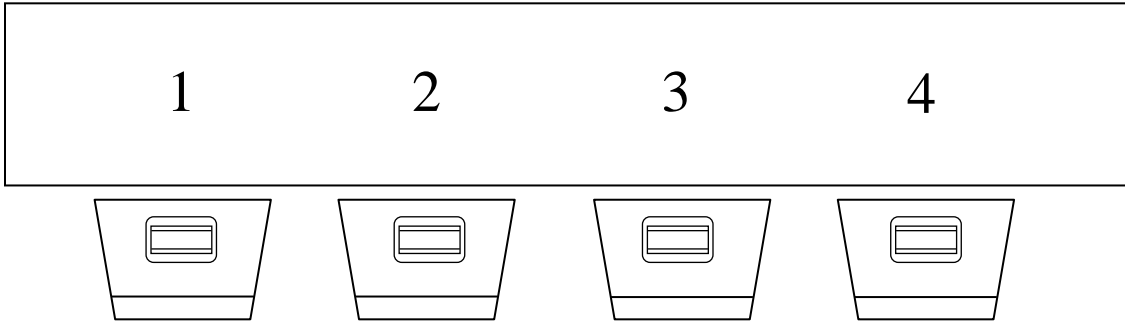

BACK

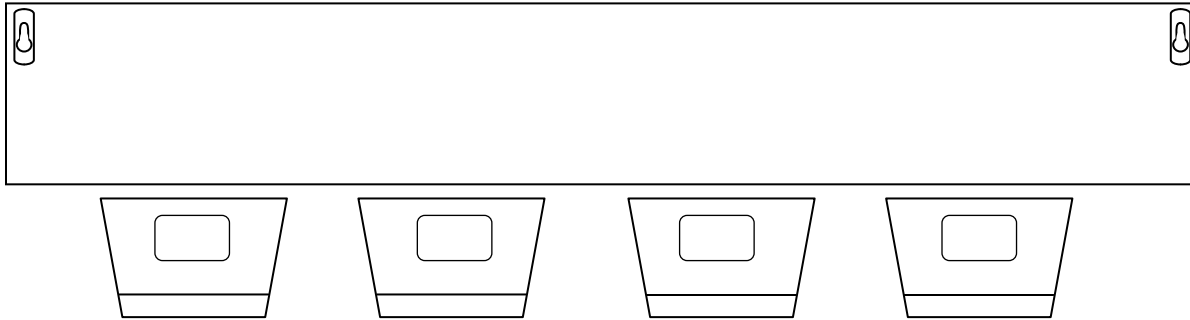

PLASTIC ANCHOR WITH PAN HEAD #8 (2-1/2" L SCREW)



Care Instructions:

Wipe with a soft, dry cloth. Do not use of any strong abrasive or solvent-based household cleaner.

thank you for your purchase