
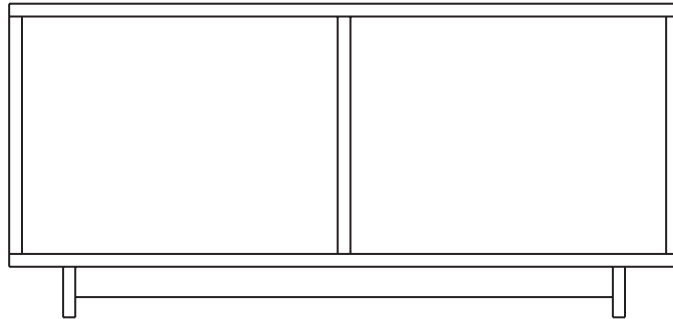


œuf®

PERCH TWIN BUNK BED SHELF

ITEM # 1PB-S



ek11955

Oeuf LLC 119 8th Street, Suite 301 | Brooklyn, NY 11215 | USA +1 (718) 965-1216 | www.oeufnyc.com

Distributed internationally by:

Australia

Kido Agencies

Postal: PO Box 6039
Alexandria NSW 2015
Australia
Tel: +61 2 9045 7799
info@kidoagencies.com

Canada

Monte Distribution Inc.

270 Belfield Rd
Toronto, Ontario M9W 1H5
Canada
Tel: +1 866 604 6755
info@oeufcanada.com

Korea

J2 International Inc.

(주) 제이투인터내셔널
서울시 강남구 도산대로 506
재정빌딩 304호
Tel: +82 70 8247 7576

UK

Kids At Home Distribution

Newick Business Centre
Church Road
Newick, BN8 4NA
England
Tel: +01825 724160

EU

Suede Import

20 Bis Rue des Champs
92600 Asnières-sur-Sein
France
Tel: +33 (0)1 40 86 06 03
suedeimport@yahoo.fr

Turkey

Operaistanbul


Cengiz Topel Cad. Tugcular sok.
No:1 Kat 3 Etiler Istanbul
Turkey
Tel: +90 212 321 8132
info@operaisatnbul.com

China

Arketype Limited















7F Metro Loft, 38 Kwai Hei St.
Kwai Chung, N.T.,
Hong Kong
+852 2110 9400
www.arketype.com


Made in Latvia

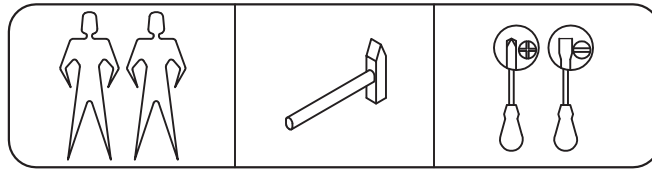


Fittings List - Bunkbed


Liste des Pièces


A	 Ø5/11x34	8 pcs	H	 3mm	1 pc
B	 Ø8x30	18 pcs	J	 Left	1 pc
C	 Ø7x50	6 pcs	K	 Right	2 pcs
D	 4mm	1 pc	L	 Right	1 pc
E	 Ø15x13,5	8 pcs	M	 Ø4x16	4 pcs
F	 Ø4x16	4 pcs	N	 Ø15 M6x22	4 pcs
G	 Ø5x40	10 pcs	P	 M6x80	4 pcs

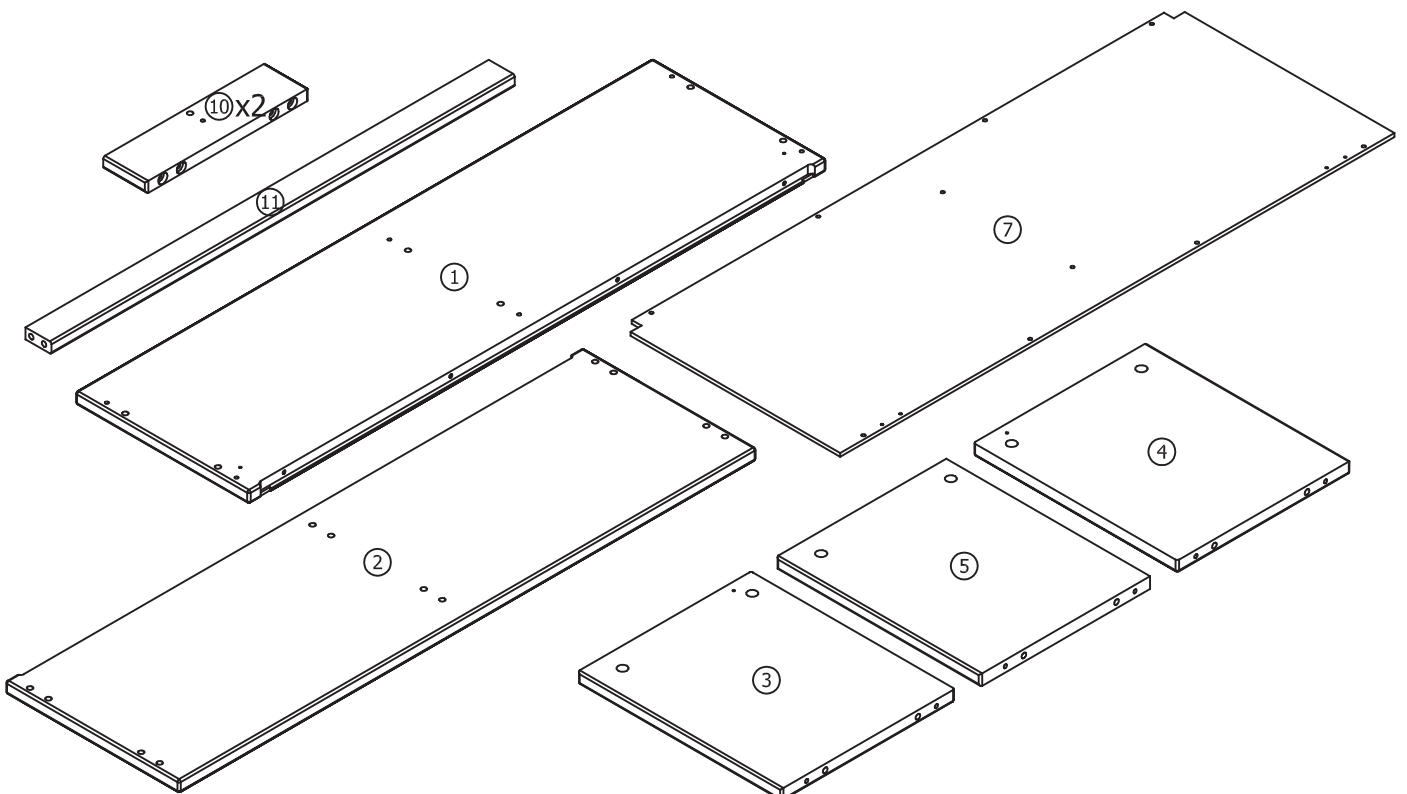


B  Ø8x30 12 pcs


1



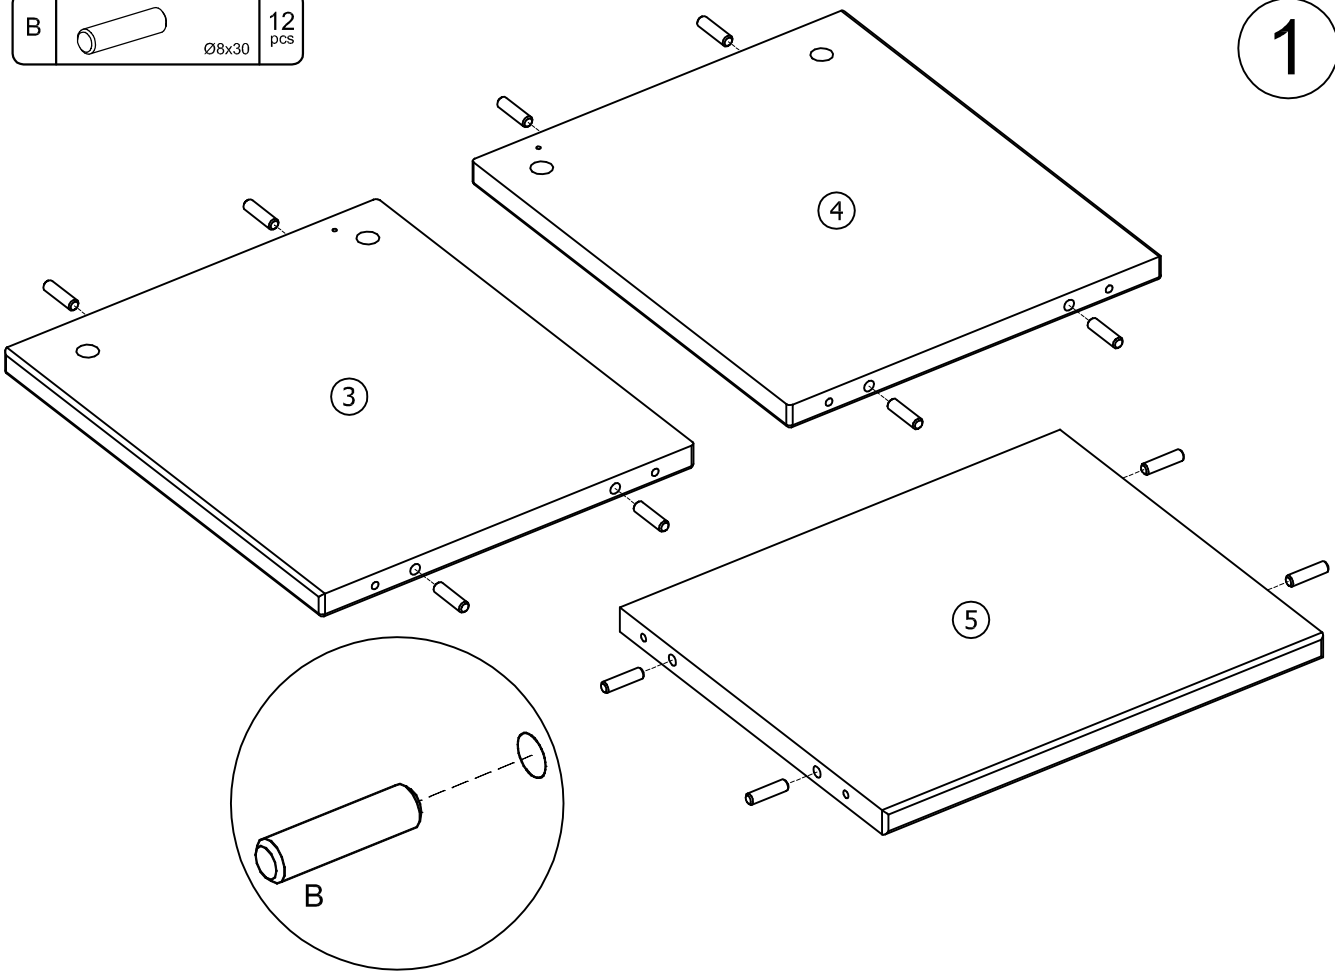


C  Ø7x50 6 pcs

D  4mm 1 pc




2

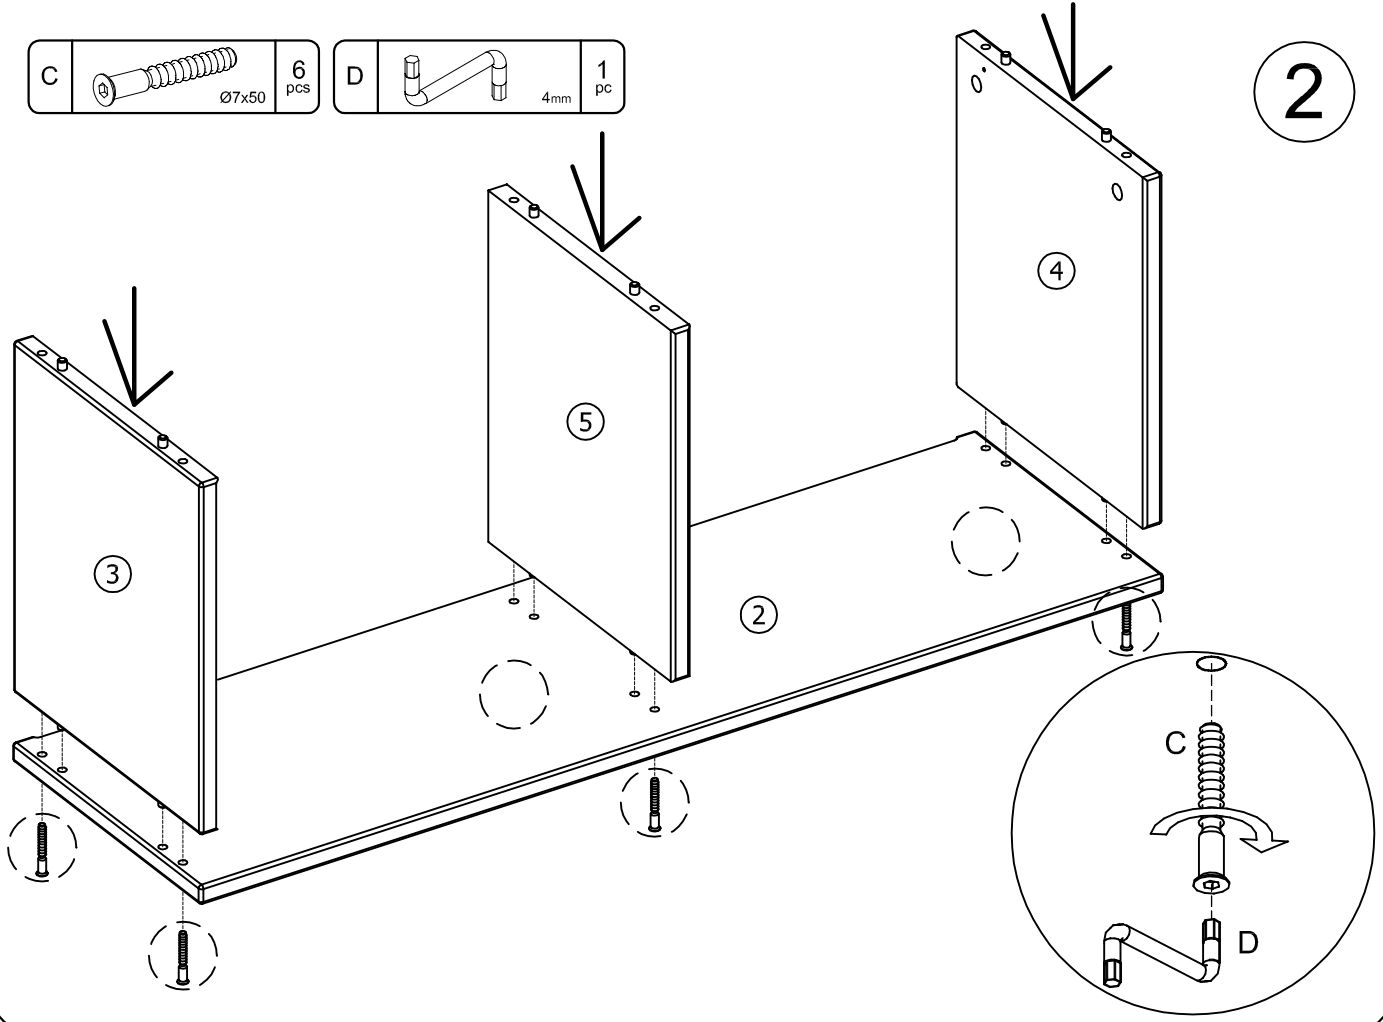





3


Do not install brackets "J" and "L" if the unit will be used on the floor as a freestanding piece.

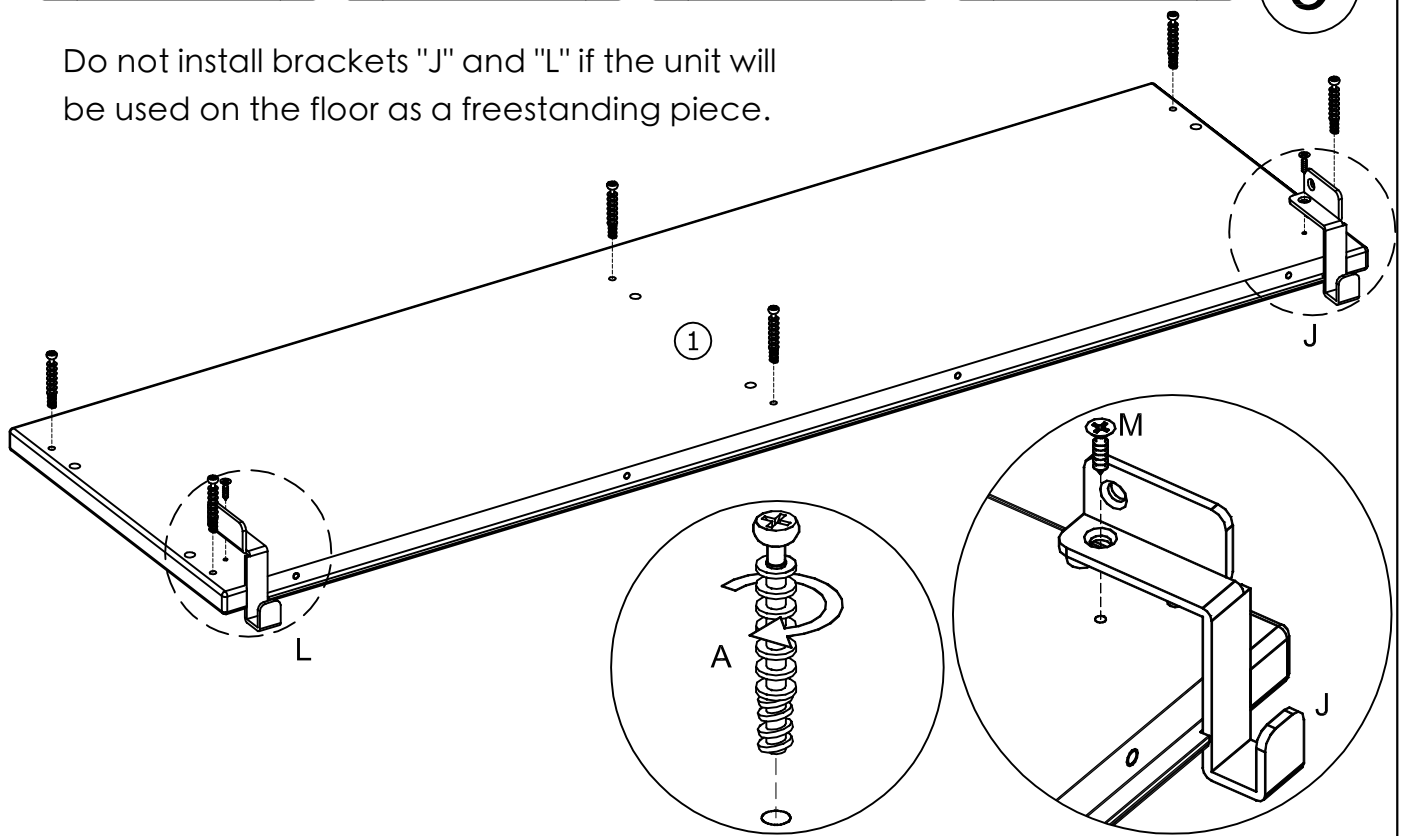



4

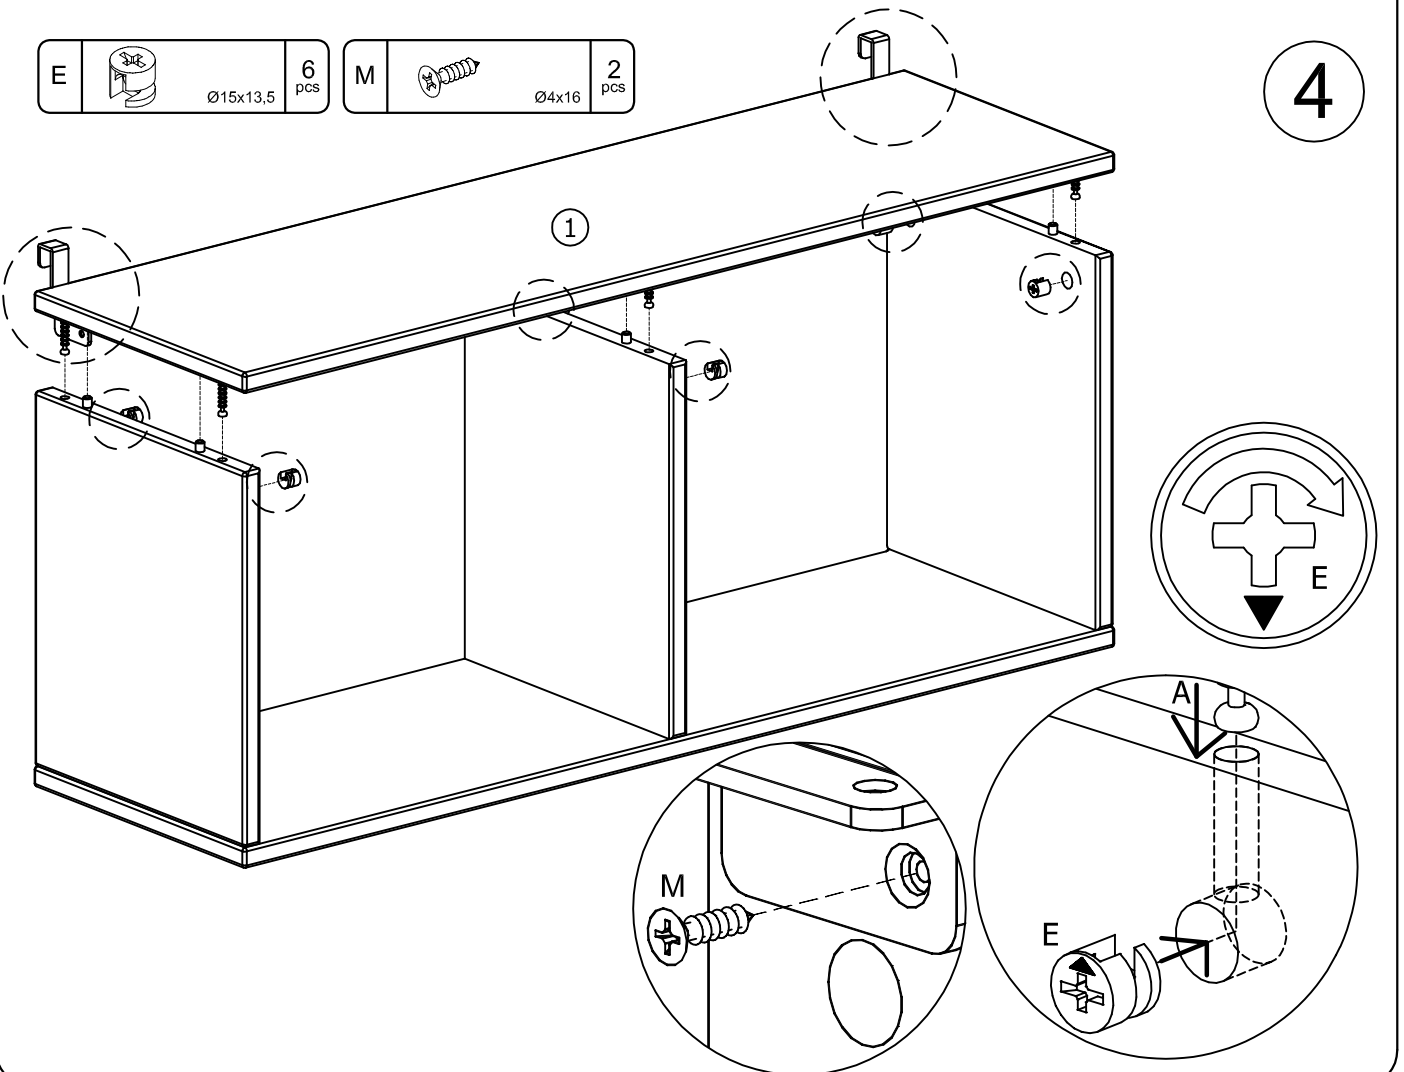


G  Ø5x40 10 pcs



H  3mm 1 pc



5

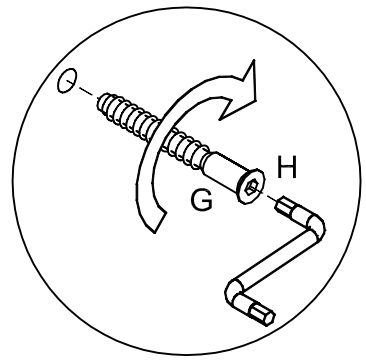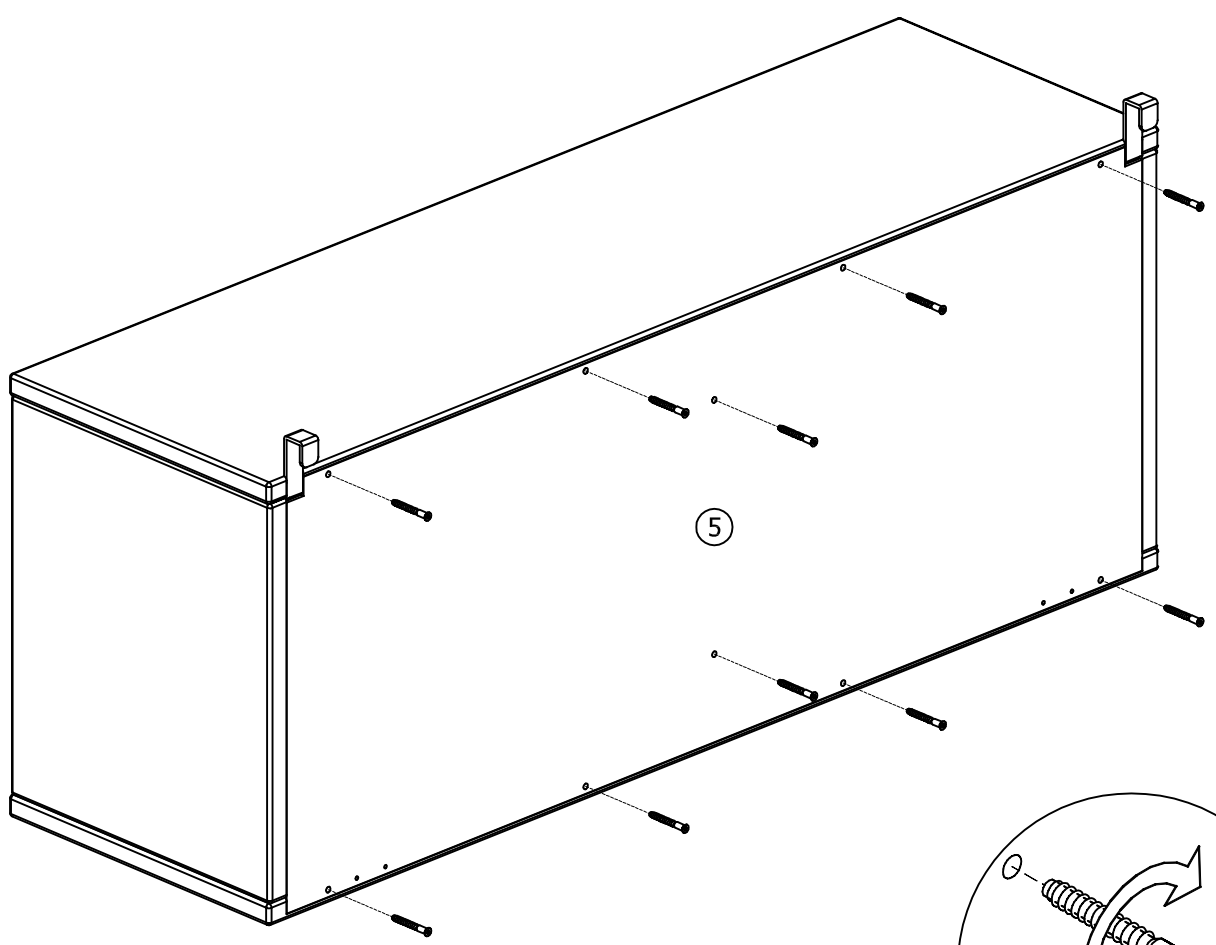

v1

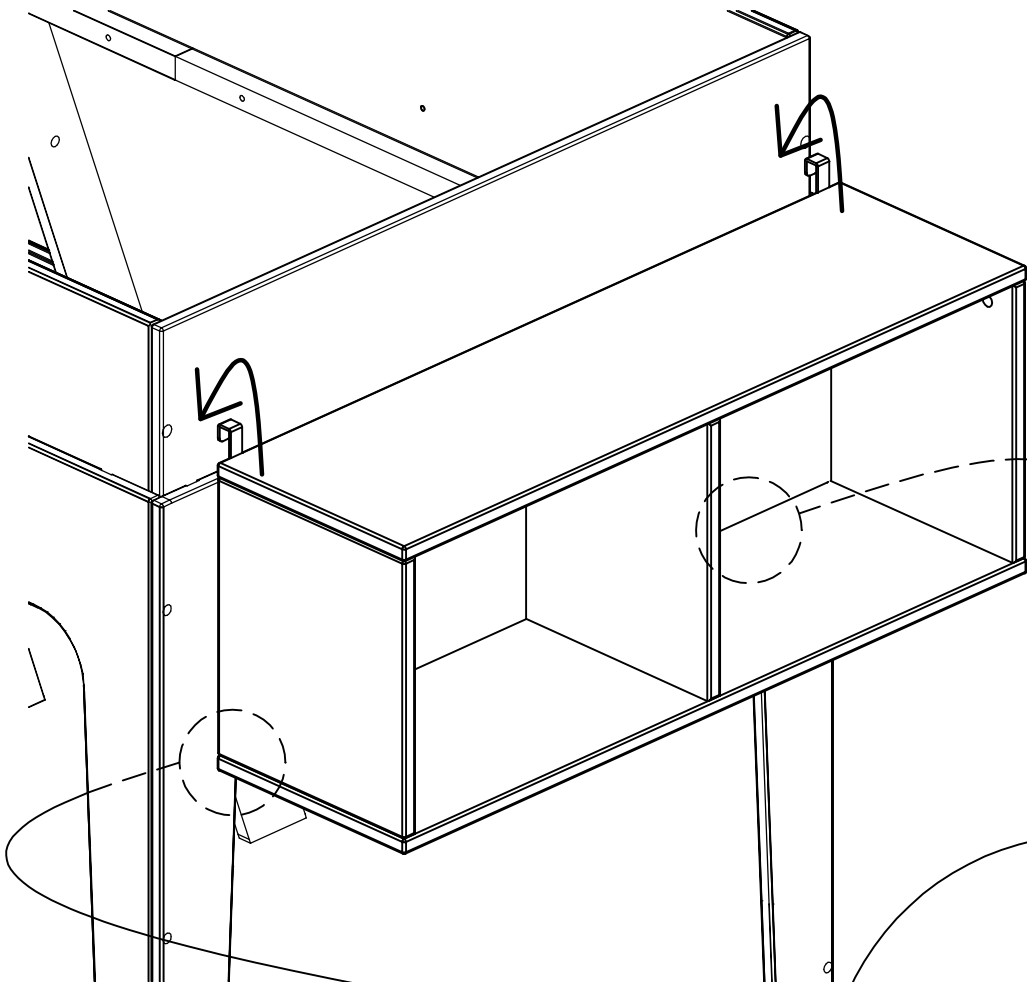


K		2 pcs	F		4 pcs Ø4x16
---	---	----------	---	---	-------------------

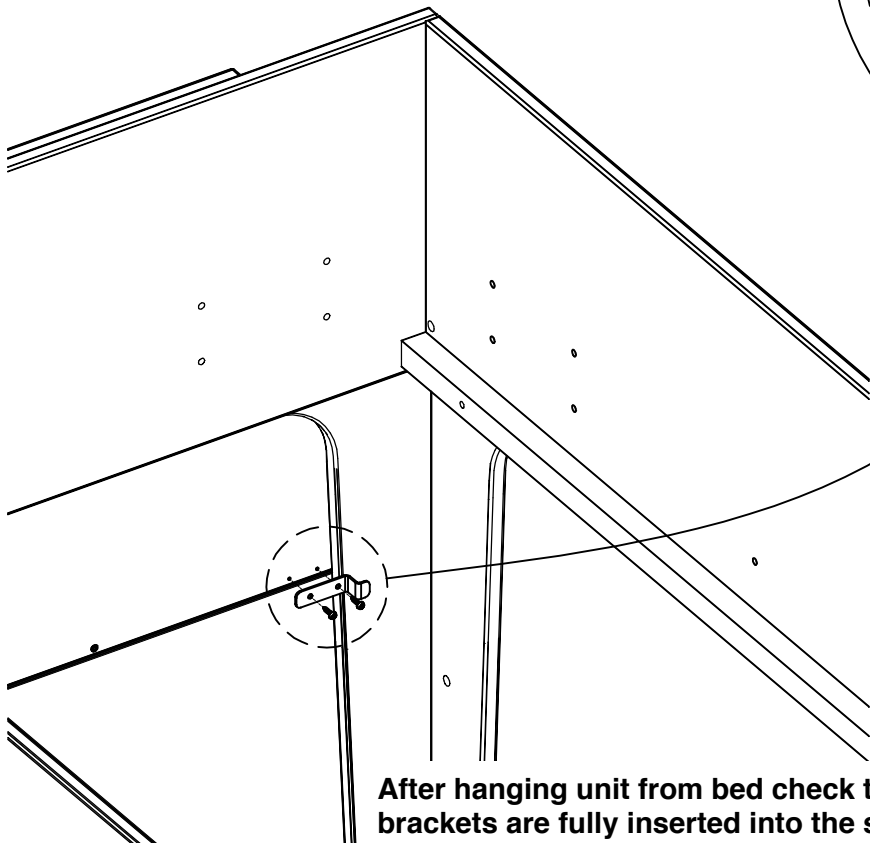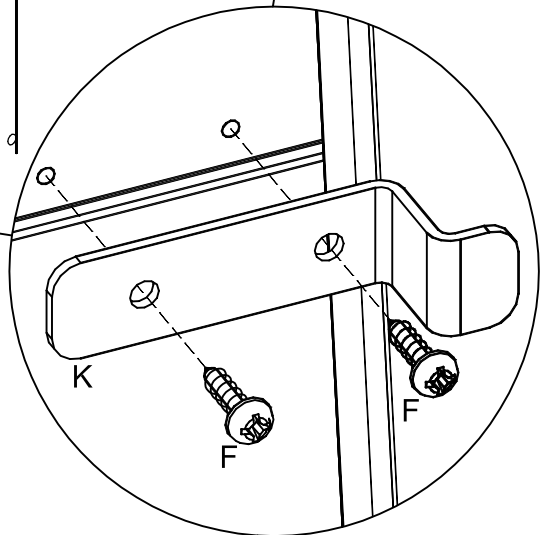

After hanging unit from bed check that the unit is secure and the brackets are fully inserted into the slots of the Perch before use.

A		2 pcs
Ø5/11x34		



B		6 pcs
Ø8x30		


E		2 pcs
Ø15x13,5		


N		4 pcs
Ø15 M6x22		

v2

Do not use the base if attaching the storage unit to the Perch Bunk Bed

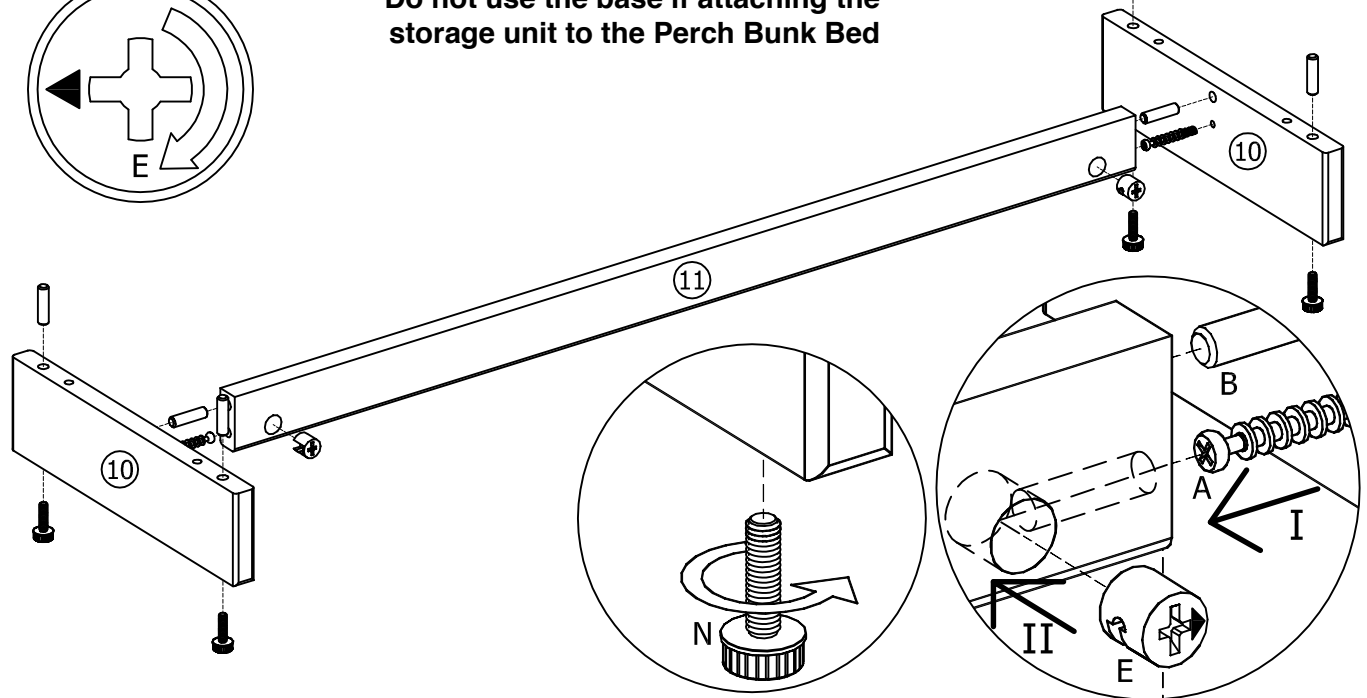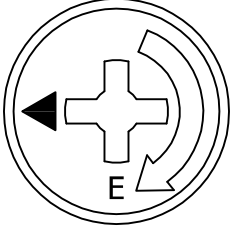

P		4 pcs
M6x80		

D		1 pc
4mm		

