



Assembly Instructions

- ! Do not throw away packaging materials until assembly is complete.
- ! To protect finish, assemble this item on a soft surface such as cardboard or carpet.
- ! Proper assembly requires two people.



Care Instructions:

- ! Hardware may loosen over time. Periodically check that all connections are tight.
- ! Wipe with a soft, dry cloth.
- ! To protect finish, avoid the use of the chemicals.

Tools Required:

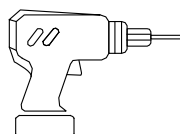

Hardware

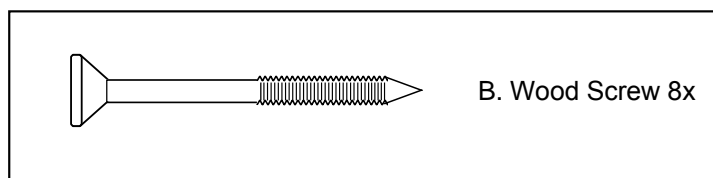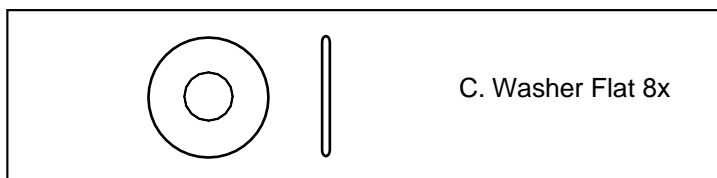

1. Use a tape measure to determine the location of the top French cleat on the back of the headboard.
2. Draw a line lightly on the wall where you would like the top of the headboard to rest. From that line measure the distance where the top French cleat will rest as determined in the first step.
3. Distance the bottom French cleat 22 3/4" from the top French cleat.
4. Use a torpedo level to level each cleat and mark their mounting holes on the wall.
5. Use four screws per cleat. It is strongly suggested that the connecting hardware should be inserted into wall studs.
6. Once both wall cleats have been secured to the wall, lift the headboard above the cleat and lower into position. Position bed to headboard.

