

west elm

Brass Bone Wall Hook Mounting Instructions

Note: For safe mounting, West Elm recommends the following:


- Stud mounting is preferred over dry wall mounting when possible.
- Consult your local hardware store if you have any questions about installing this product.
- Maximum total weight capacity for this product is 20 pounds (9.1 Kg), (4 pounds (1.8 Kg) maximum per hook).

Hardware Included:

(2) Screws and (2) Metal ITW Anchors




TOOLS NEEDED (not included):

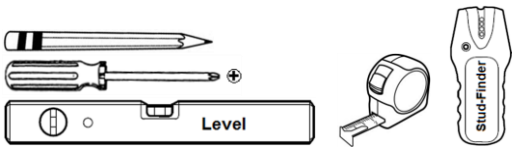

MOUNTING INSTRUCTIONS:

Step 1:

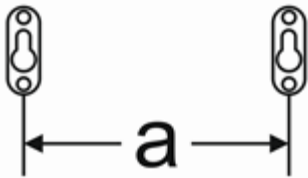



Determine a desired location for the wall hook to hang.

Step 1: Measure the distance “a” between the center of two hanging hardware located on back of the wall hook.


Step 2: With the back of the item facing away from the wall, hold it against the wall at a desired mounting location. Mark two reference points (A,B) on the wall as shown.

Step 3: Connect the two points (A, B) with a light pencil line. Use a level to ensure that the line is level.


Step 2:

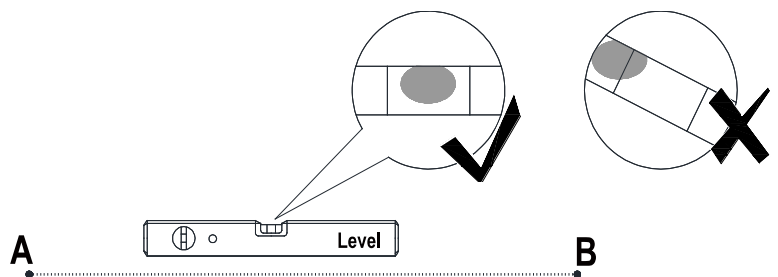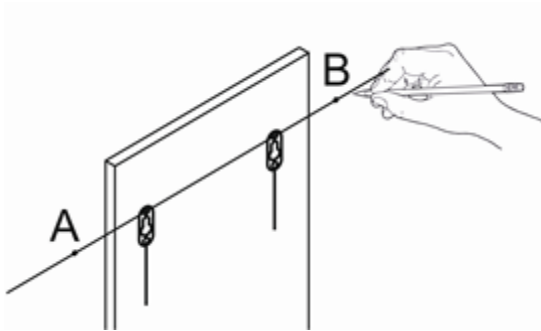

Step 4: Make two insertion marks (C, D) centered along the line using the measurement “a”.

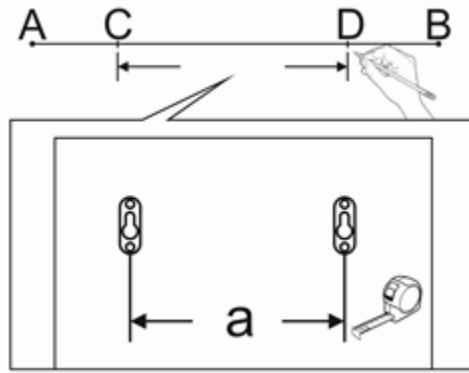

Step 5: Use a stud finder to determine points C/D align with a wall stud. Install the appropriate hardware as per below diagram. Note that the head of each screw resides about 3/8" from the wall.

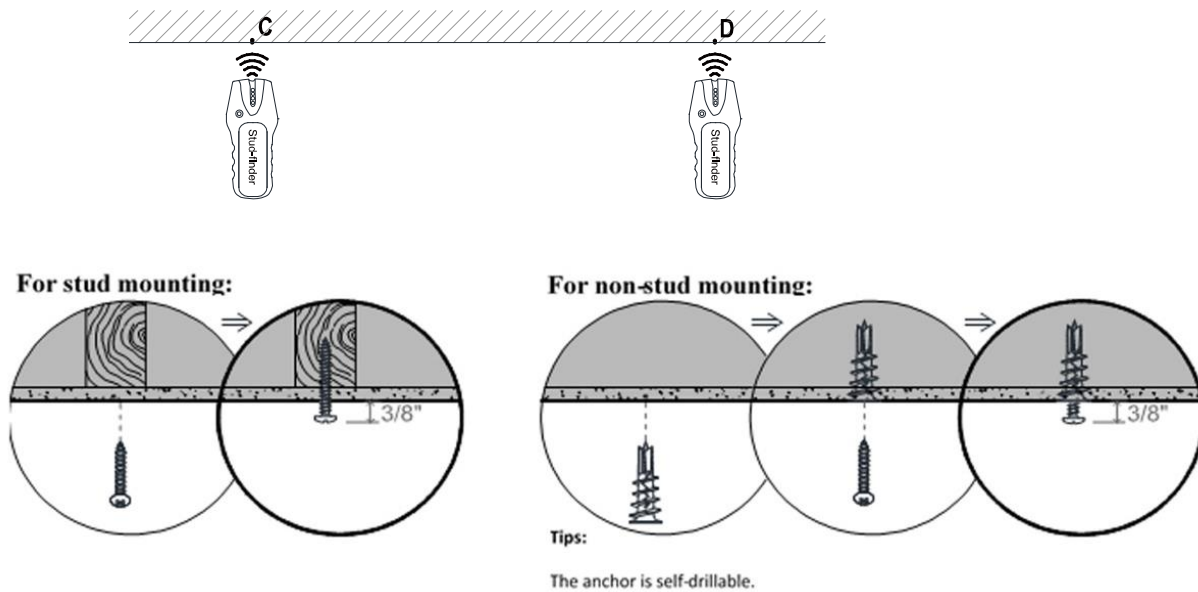

Step 6: Hang the wall hook on the screw heads. If it does not fit properly, you may need to adjust the gap between the head of screw and the wall and hang again.

CARE AND INSTRUCTION:

- Wipe with a soft, dry cloth.
- To protect the finish, do not apply household cleaners or abrasives.

Thank you for your purchase
Stores | catalog | www.westelm.com