



west elm

morgan wedge unit

assembly instructions

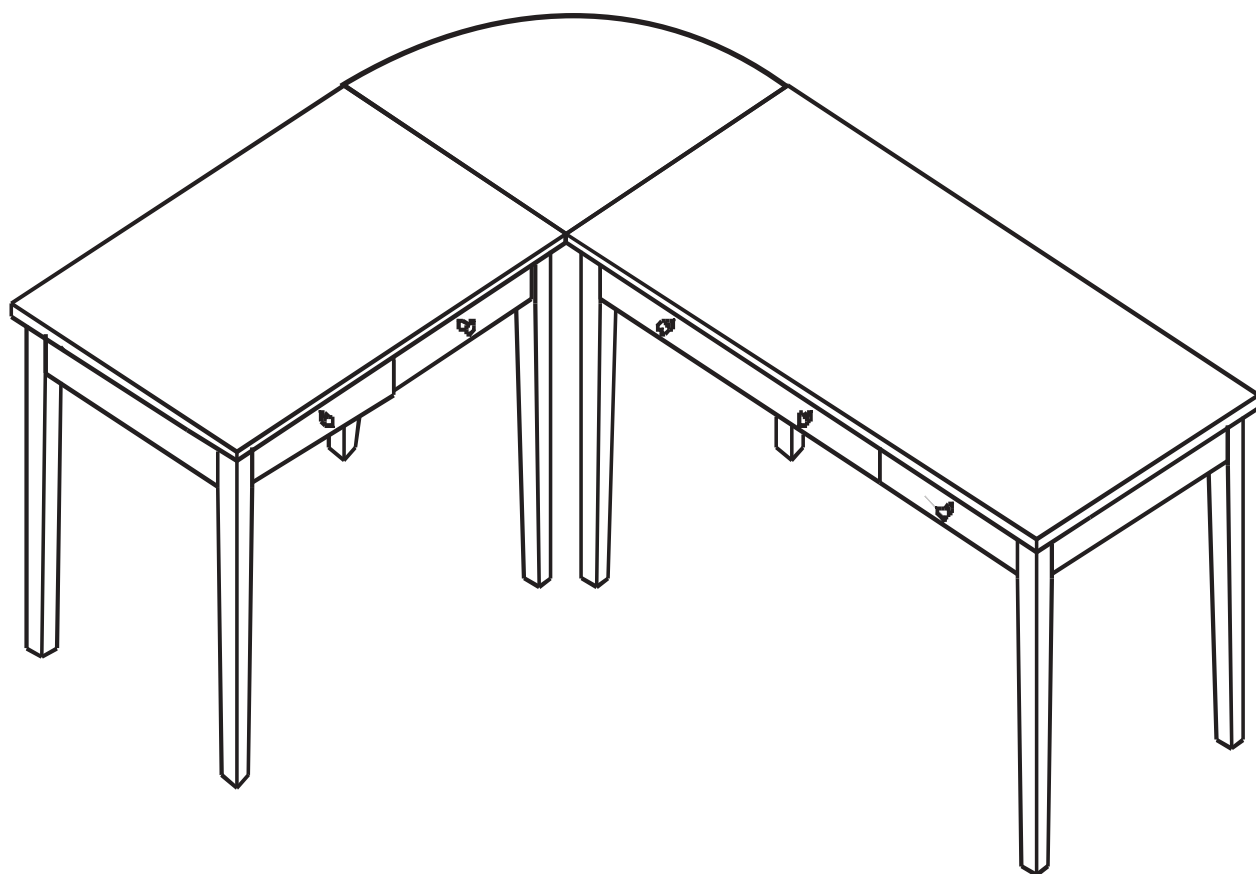


! Tools required:




! Do not throw away packaging materials until assembly is complete.

! Assemble this item on a soft surface, such as cardboard or carpet, to protect finish.




Large desk x 1  
(sold separate SKU)

A




Wooden Brace x 1

D




Small desk x 1  
(sold separate SKU)

B




Allen bolt with Flat &  
Lock washer

x 16 E




Corner connector x 1

C



Allen key wrench (included) x 1


F







wooden bars x 2



G

1

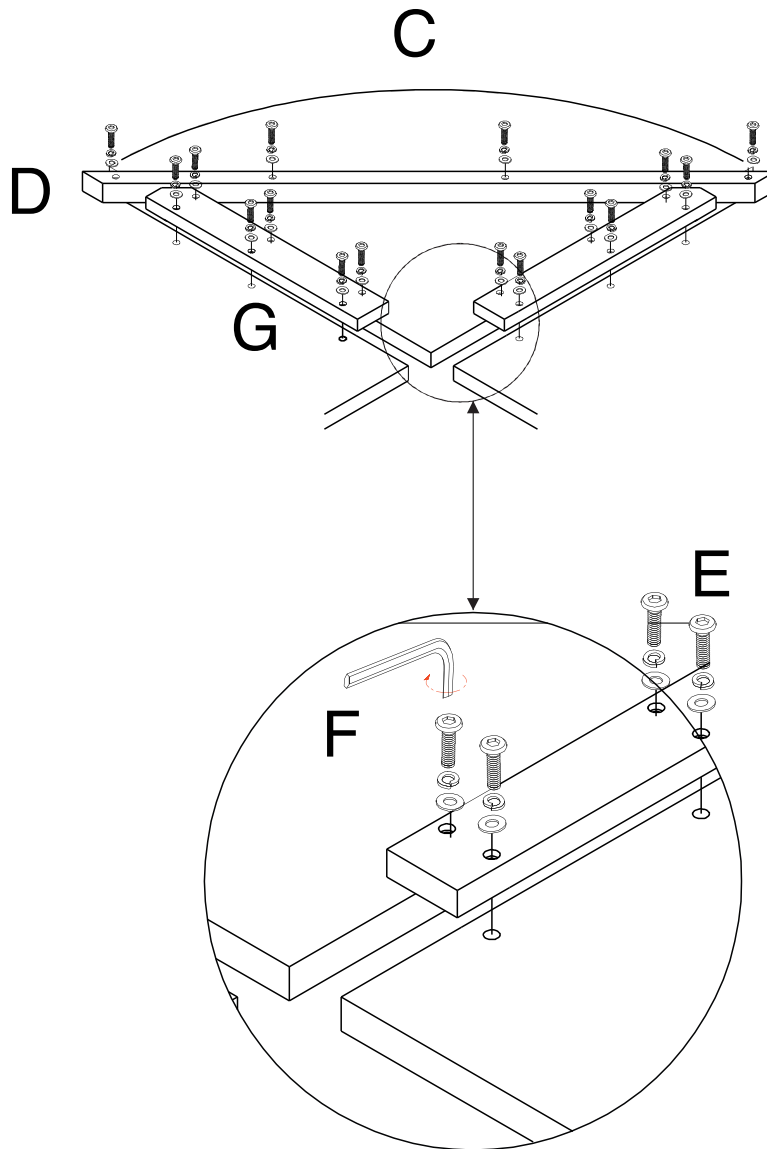

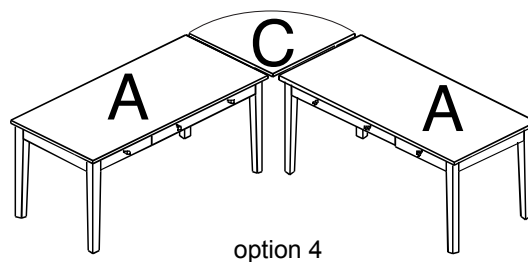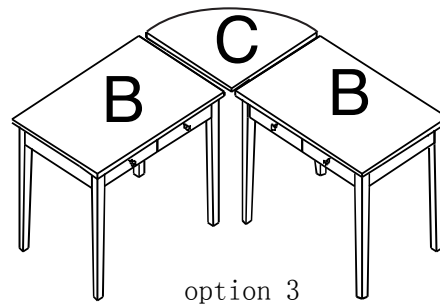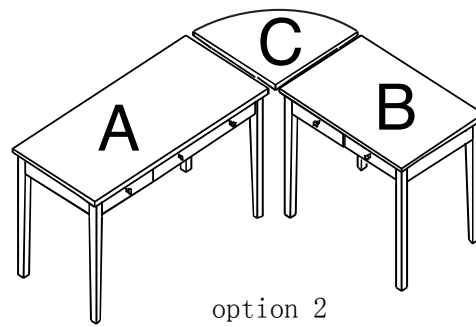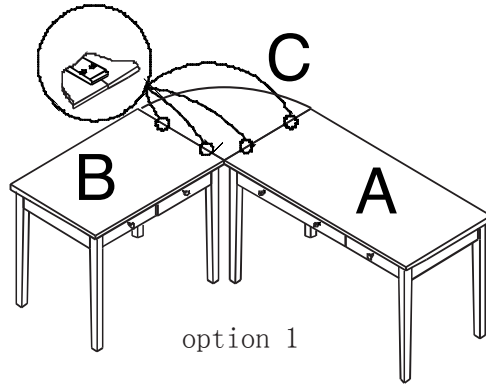

2

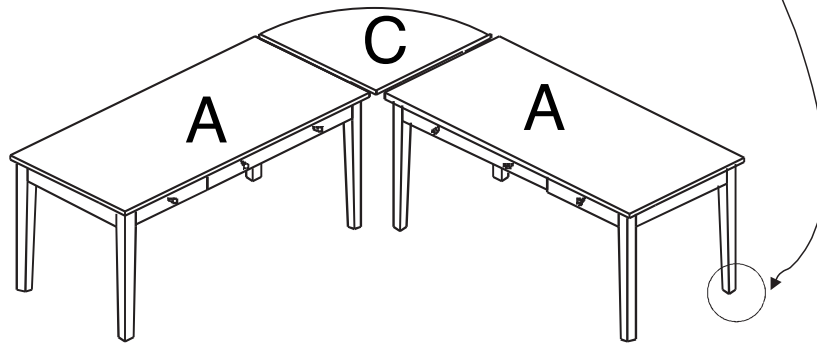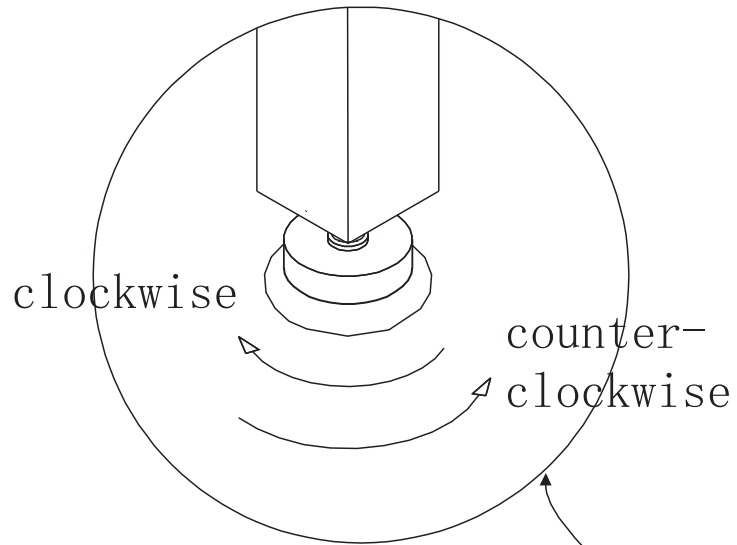

CARE INSTRUCTION

Hardware may loosen over time. Periodically check that all connections are tight.

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.