


west elm : chunky wood floor mirror

care and mounting instructions

OVER BALANCE. To prevent injury and property damage from unexpected tipping of furniture, we highly recommend installation of the anti-tip kit included with this product.

PLEASE NOTE: Please note tip kit comes with 1 extra plastic bracket and 1 extra set of short screws. Customer must use long set of screws when securing plastic bracket to wall.

1. Determine where the furniture is to be placed and mark location on the wall for the mounting bracket screw holes. They should be placed approximately 2" below the D-ring on the back of the mirror frame
2. Attach the mounting bracket vertically to the wall by inserting the long screws provided through the holes in the bracket and tightening securely using screwdriver.
3. Place the furniture so the D-ring on the back edge is in line with the bracket on the wall.
4. Lace an end of the nylon restraint strap down through the bracket. Bring both ends together and slide the thin end of the strap through the receiving end of the strap until snug.
5. Check to make sure the strap is securely laced and locked to the bracket and D-ring.

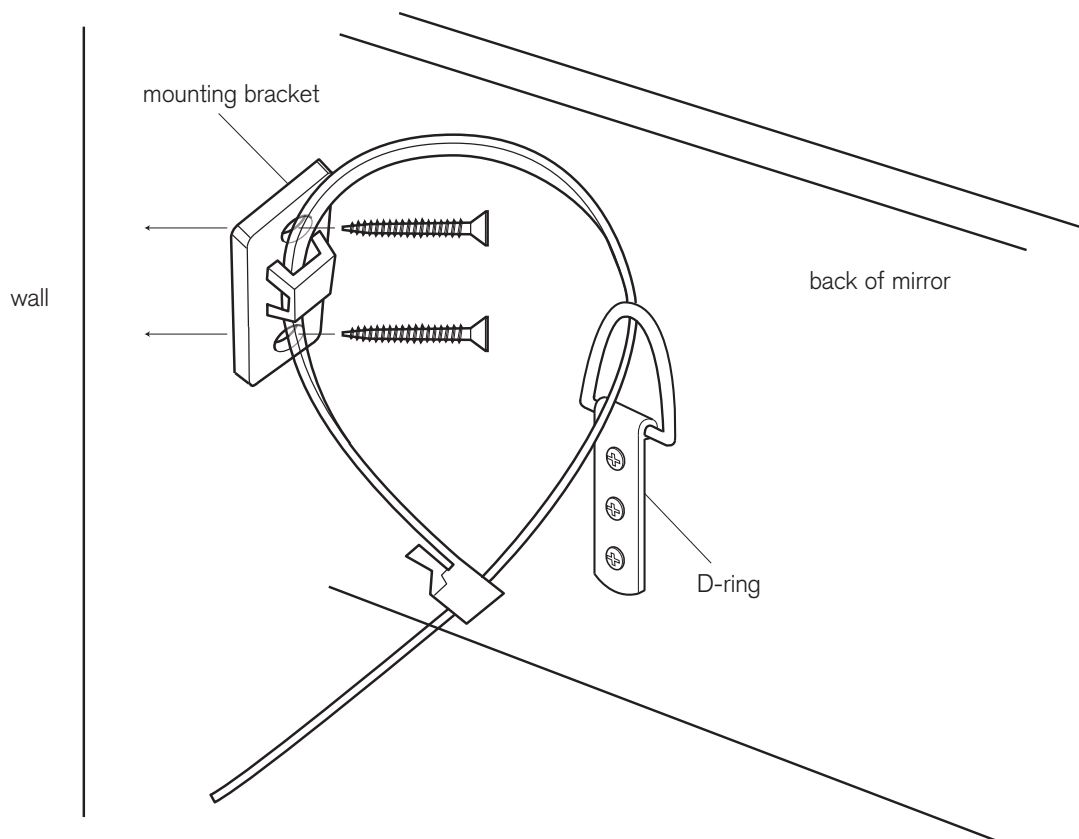

CARE INSTRUCTIONS:

- Wipe frame with a soft, dry cloth. To protect the finish, avoid the use of all chemicals and household cleaners.