


NOTE:

- Stud mounting is recommended. Use proper hardware for your wall type (such as anchors for drywall). When in doubt, consult your local hardware store. For your safety, installation by two people is recommended.
- Wipe with a soft, dry cloth. To protect the finish, avoid the use of all chemicals and household cleaners.
- For drywall mounting, use anchors with screws. For stud mounting, use screws only.

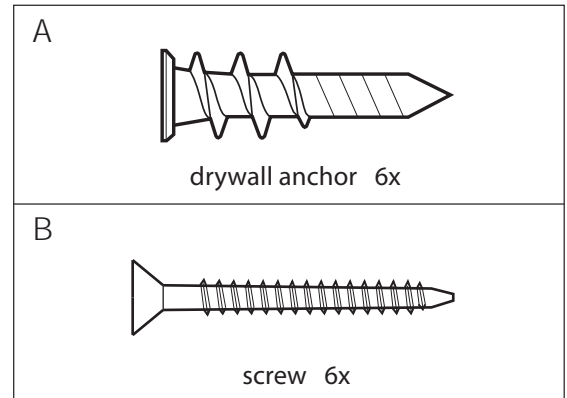

1. Mark the desired location of the shelf on your wall. Use a carpenter's level to insure the shelf will be level. Hold the brackets at desired locations and mark through the holes with a pencil onto the wall. Be sure that one screw for each bracket will go into a stud. The other screw for each bracket will be used with the drywall anchor.

2. For drywall mounting: using a Philip's head screwdriver, insert the drywall anchors (A) into the wall at the insertion points. Press and turn clockwise until anchors are flush with the wall. Insert one screw (B) per bracket through the bracket holes into the anchors.

3. Insert one screw (B) per bracket through the bracket holes directly into studs.

4. Place wood shelf on brackets.

NOTE: Load maximum for shelving!

36 inch shelf max load is 15lbs

48 inch shelf max load is 20lbs

60 inch shelf max load if 25lbs

