


# west elm : bracket flat stock s/2

## mounting instructions

### NOTE:

- For your safety, installation by two people is recommended.
- STUD MOUNTING REQUIRED. LOAD CAPACITY IS 50 LBS.
- Wipe with a soft, dry cloth. To protect the finish, avoid the use of all chemicals and household cleaners.

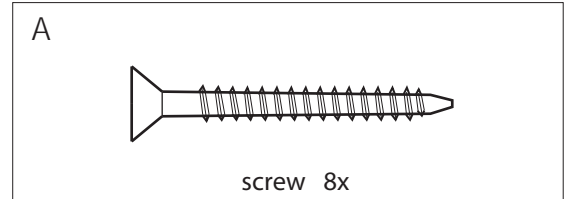

1. Use a stud finder to locate the studs in your wall and mark these locations in the desired mounting area of the wall. Use a carpenter's level to insure the shelf will be level. Hold the brackets at desired locations and mark through the holes with a pencil onto the wall. Be sure that all screws will go into a stud.
2. Insert screws (A) through the bracket holes directly into studs.
3. Place wood shelf on brackets.

