


west elm

hammered copper mirror

mounting instructions

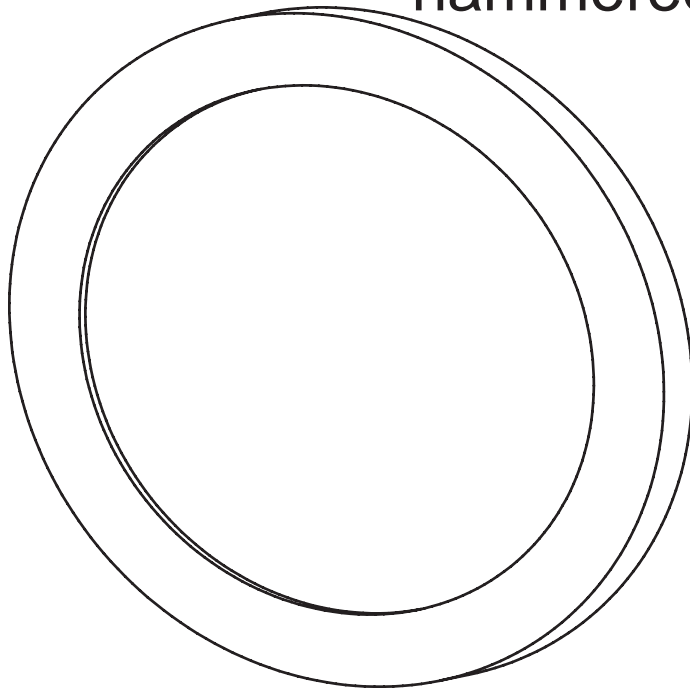

phillips screwdriver

! Tools required:




! Do not throw away packaging materials until assembly is complete.

! Assemble this item on a soft surface, such as cardboard or carpet, to protect finish.

! Proper assembly of this item requires 2 people.


## Parts:

A

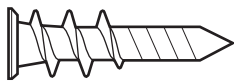


Drywall Anchor 1x

B

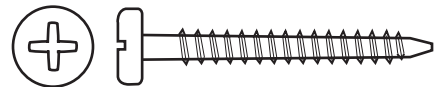


Long Screw 1x

C

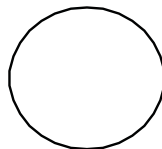

EVA Pad 2x

1. Find the desired location on wall. Using a pencil, mark the locations on the wall. This is where the hardware will be inserted.
2. Using a Philip's head screwdriver, insert the drywall anchor (A) into the wall at the insertion point. Press and turn clockwise until anchor is flush with the wall.
3. Insert screw (B) into the anchor or at the insertion points, leaving approximately 1/2" between the back of the screw head and the wall.
4. Align "D" ring on back of mirror over the screw head.
5. Slide the mirror down until it rests on the screws. Tighten or loosen screws as needed to fit the shelf snugly against the wall.

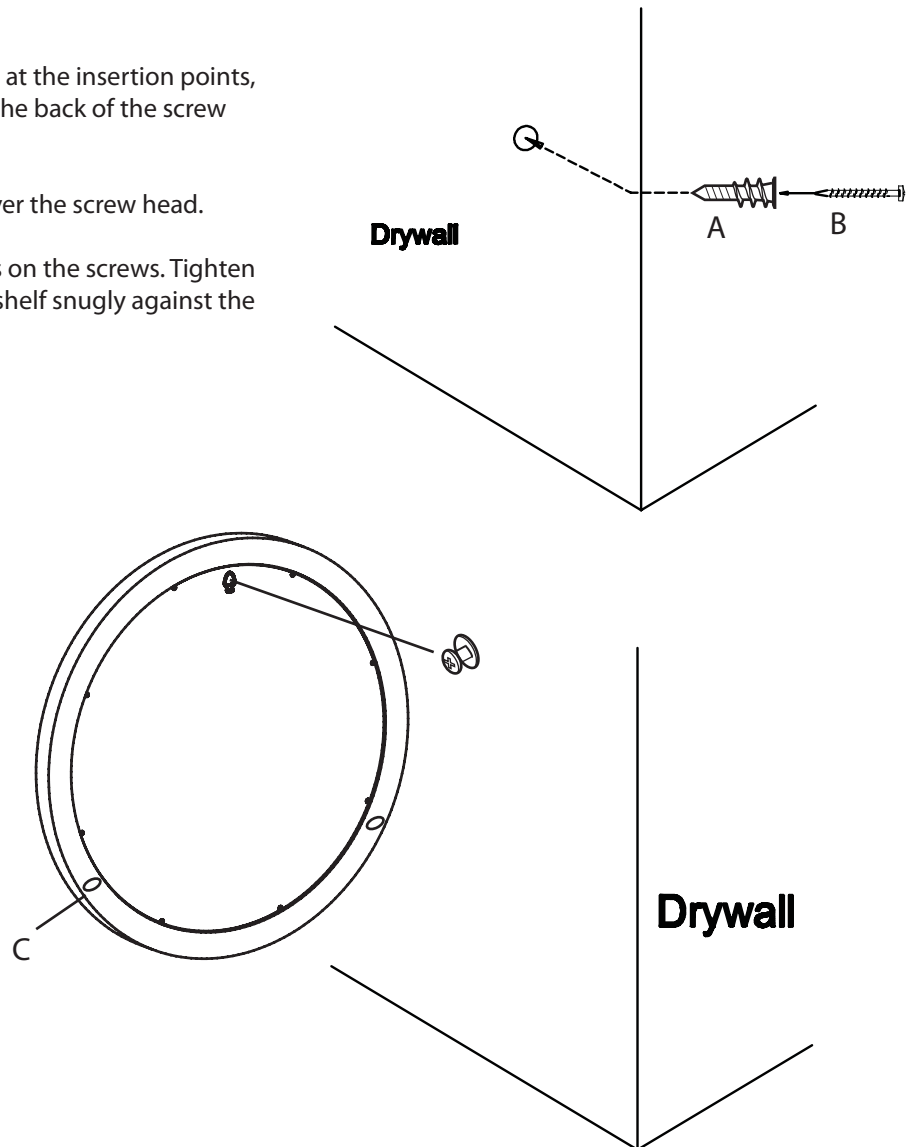

#### CARE INSTRUCTIONS

Hardware may loosen overtime. Periodically check that all connections are tight.

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.